

Bang & Olufsen

Beocenter 2300

Type 2611, 2612, 2613, 2614,
2615, 2616, 2617, 2618,
2619, 2620

Beocenter 2300

Type 2611, 2612, 2613, 2614,
2615, 2616, 2617, 2618,
2619, 2620

ABO-CENTER V/HENRIKSENS ELEKTRONIK


Indklæbes i Serviceanvisningen Beosystem 2500 (3538775)
Paste into Service Manual Beosystem 2500 (3538775)
In Serviceanleitung Beosystem 2500 (3538776) einkleben
A coller le Manual d'entretien pour Beosystem 2500 (3538776)

3538787


5-91


SERVICE ANVISNING
SERVICE MANUAL
SERVICEANLEITUNG
MANUAL d'ENTRETIEN



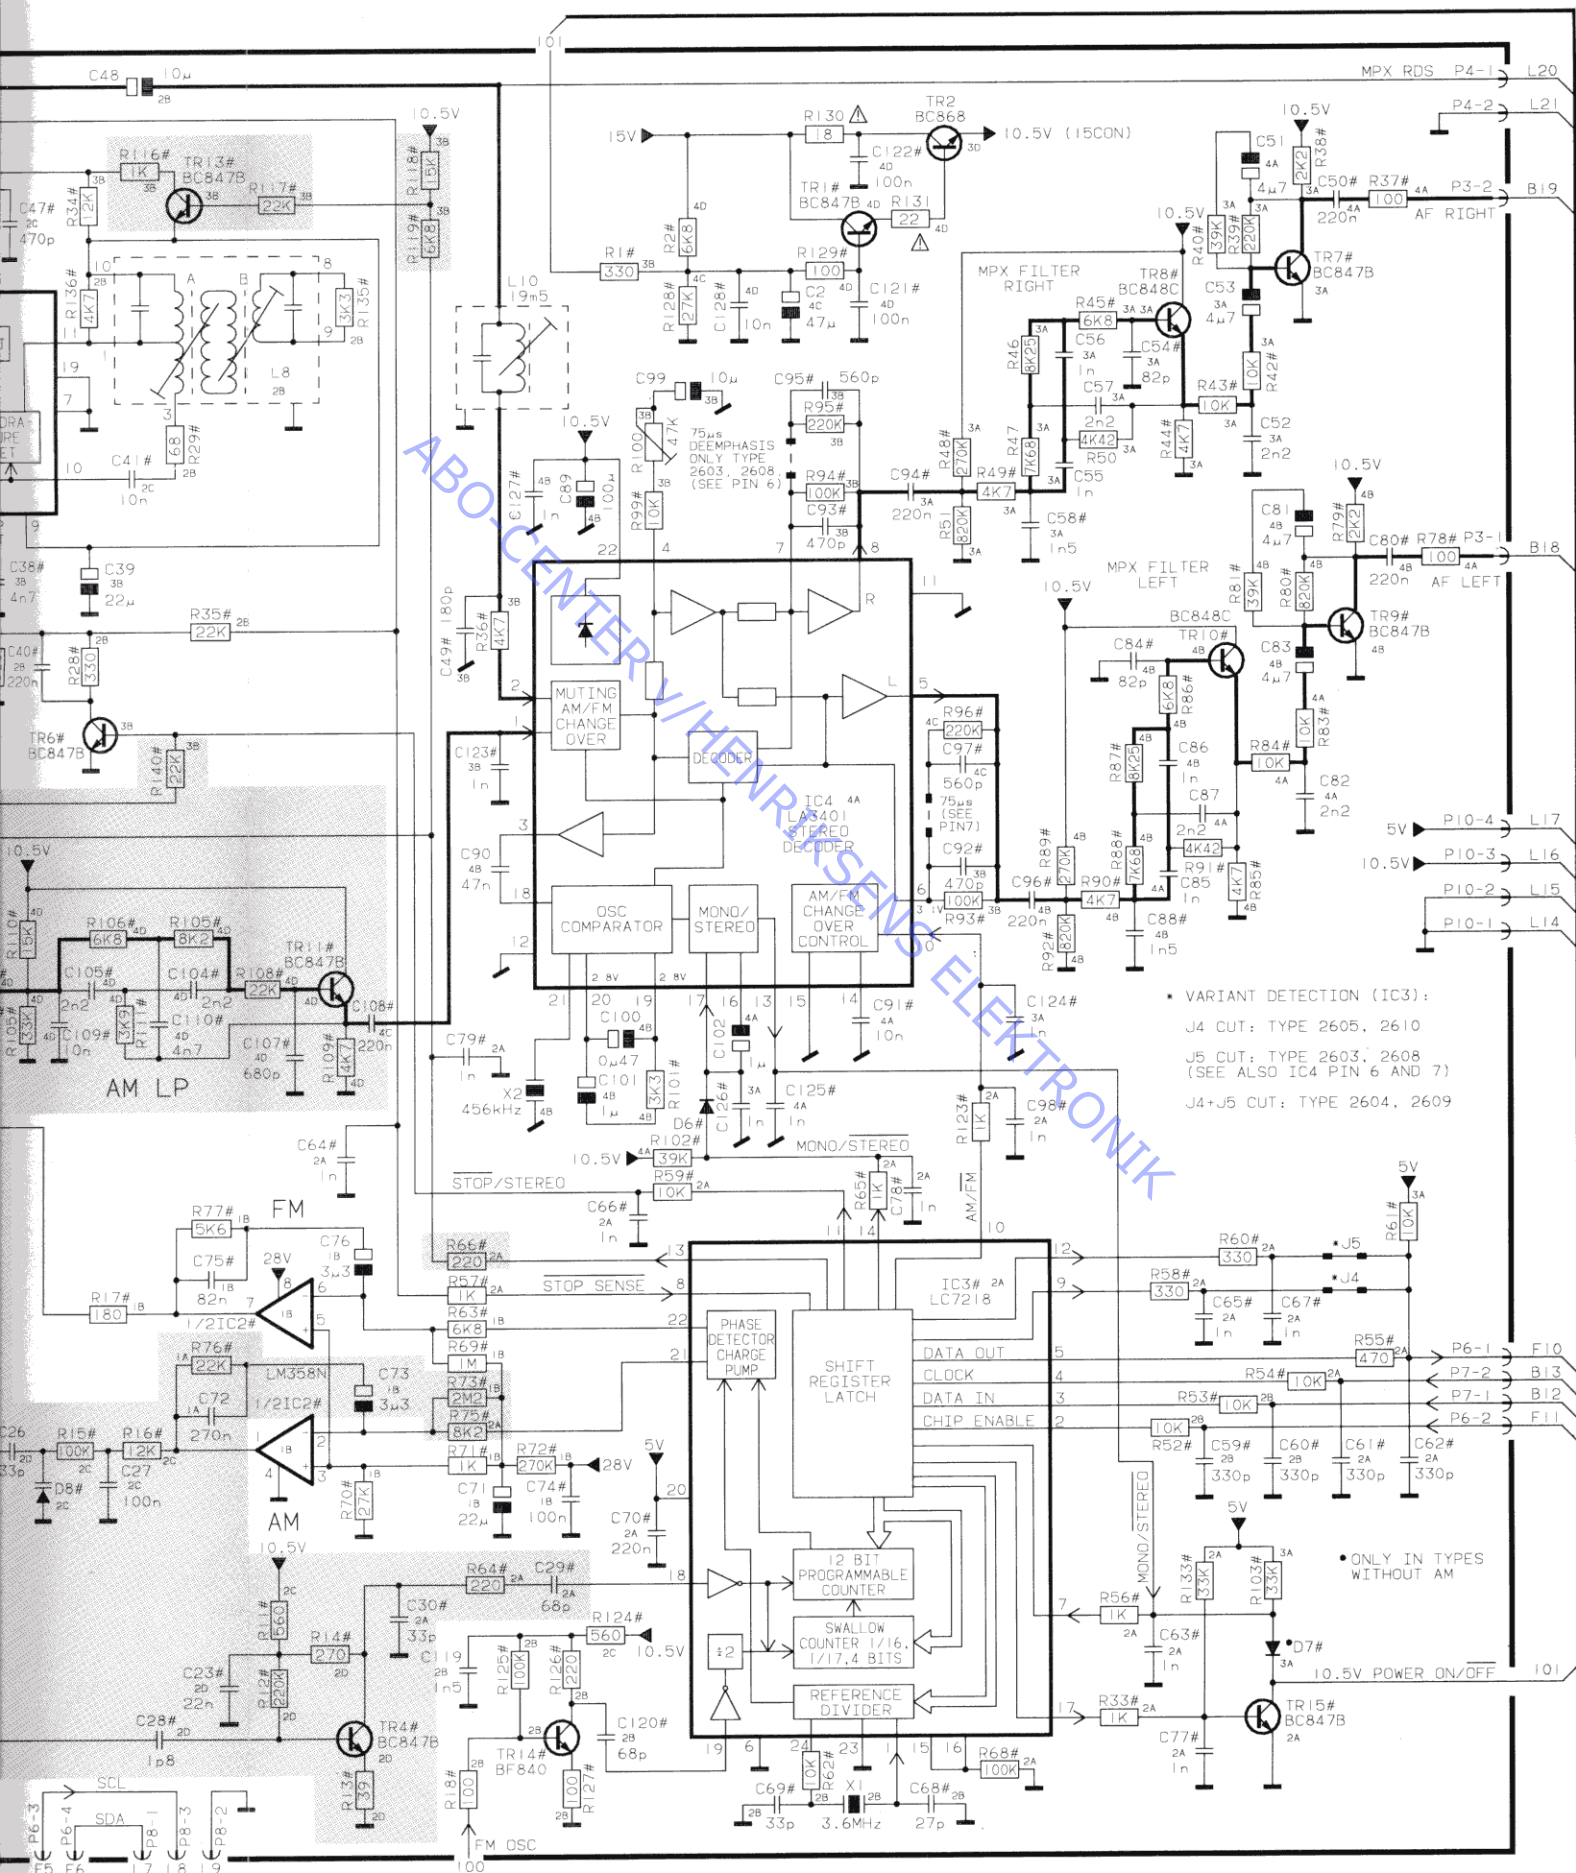

[illegible]

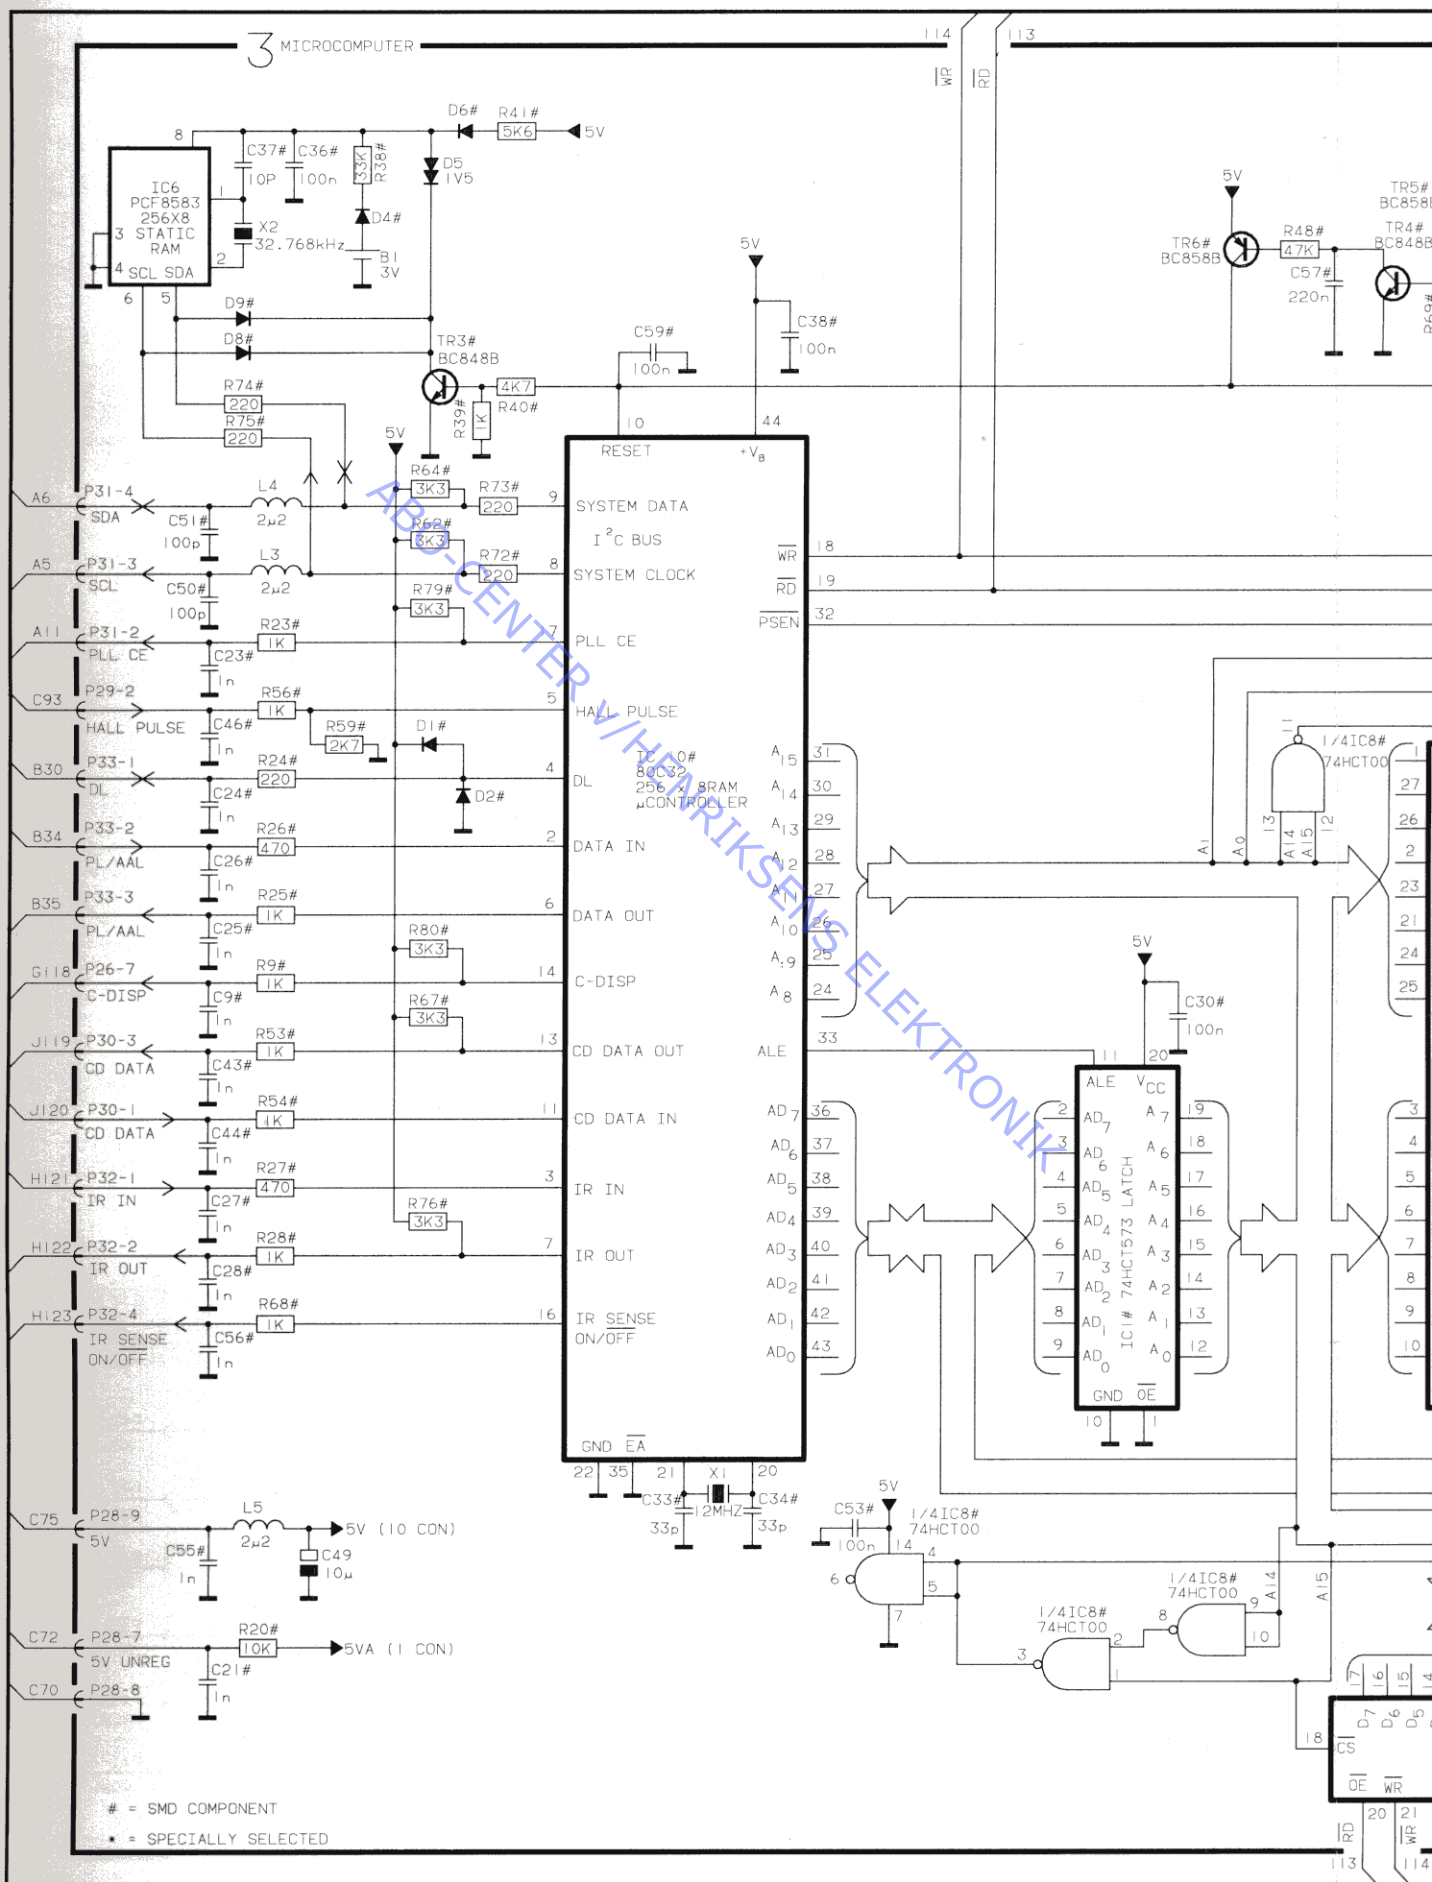

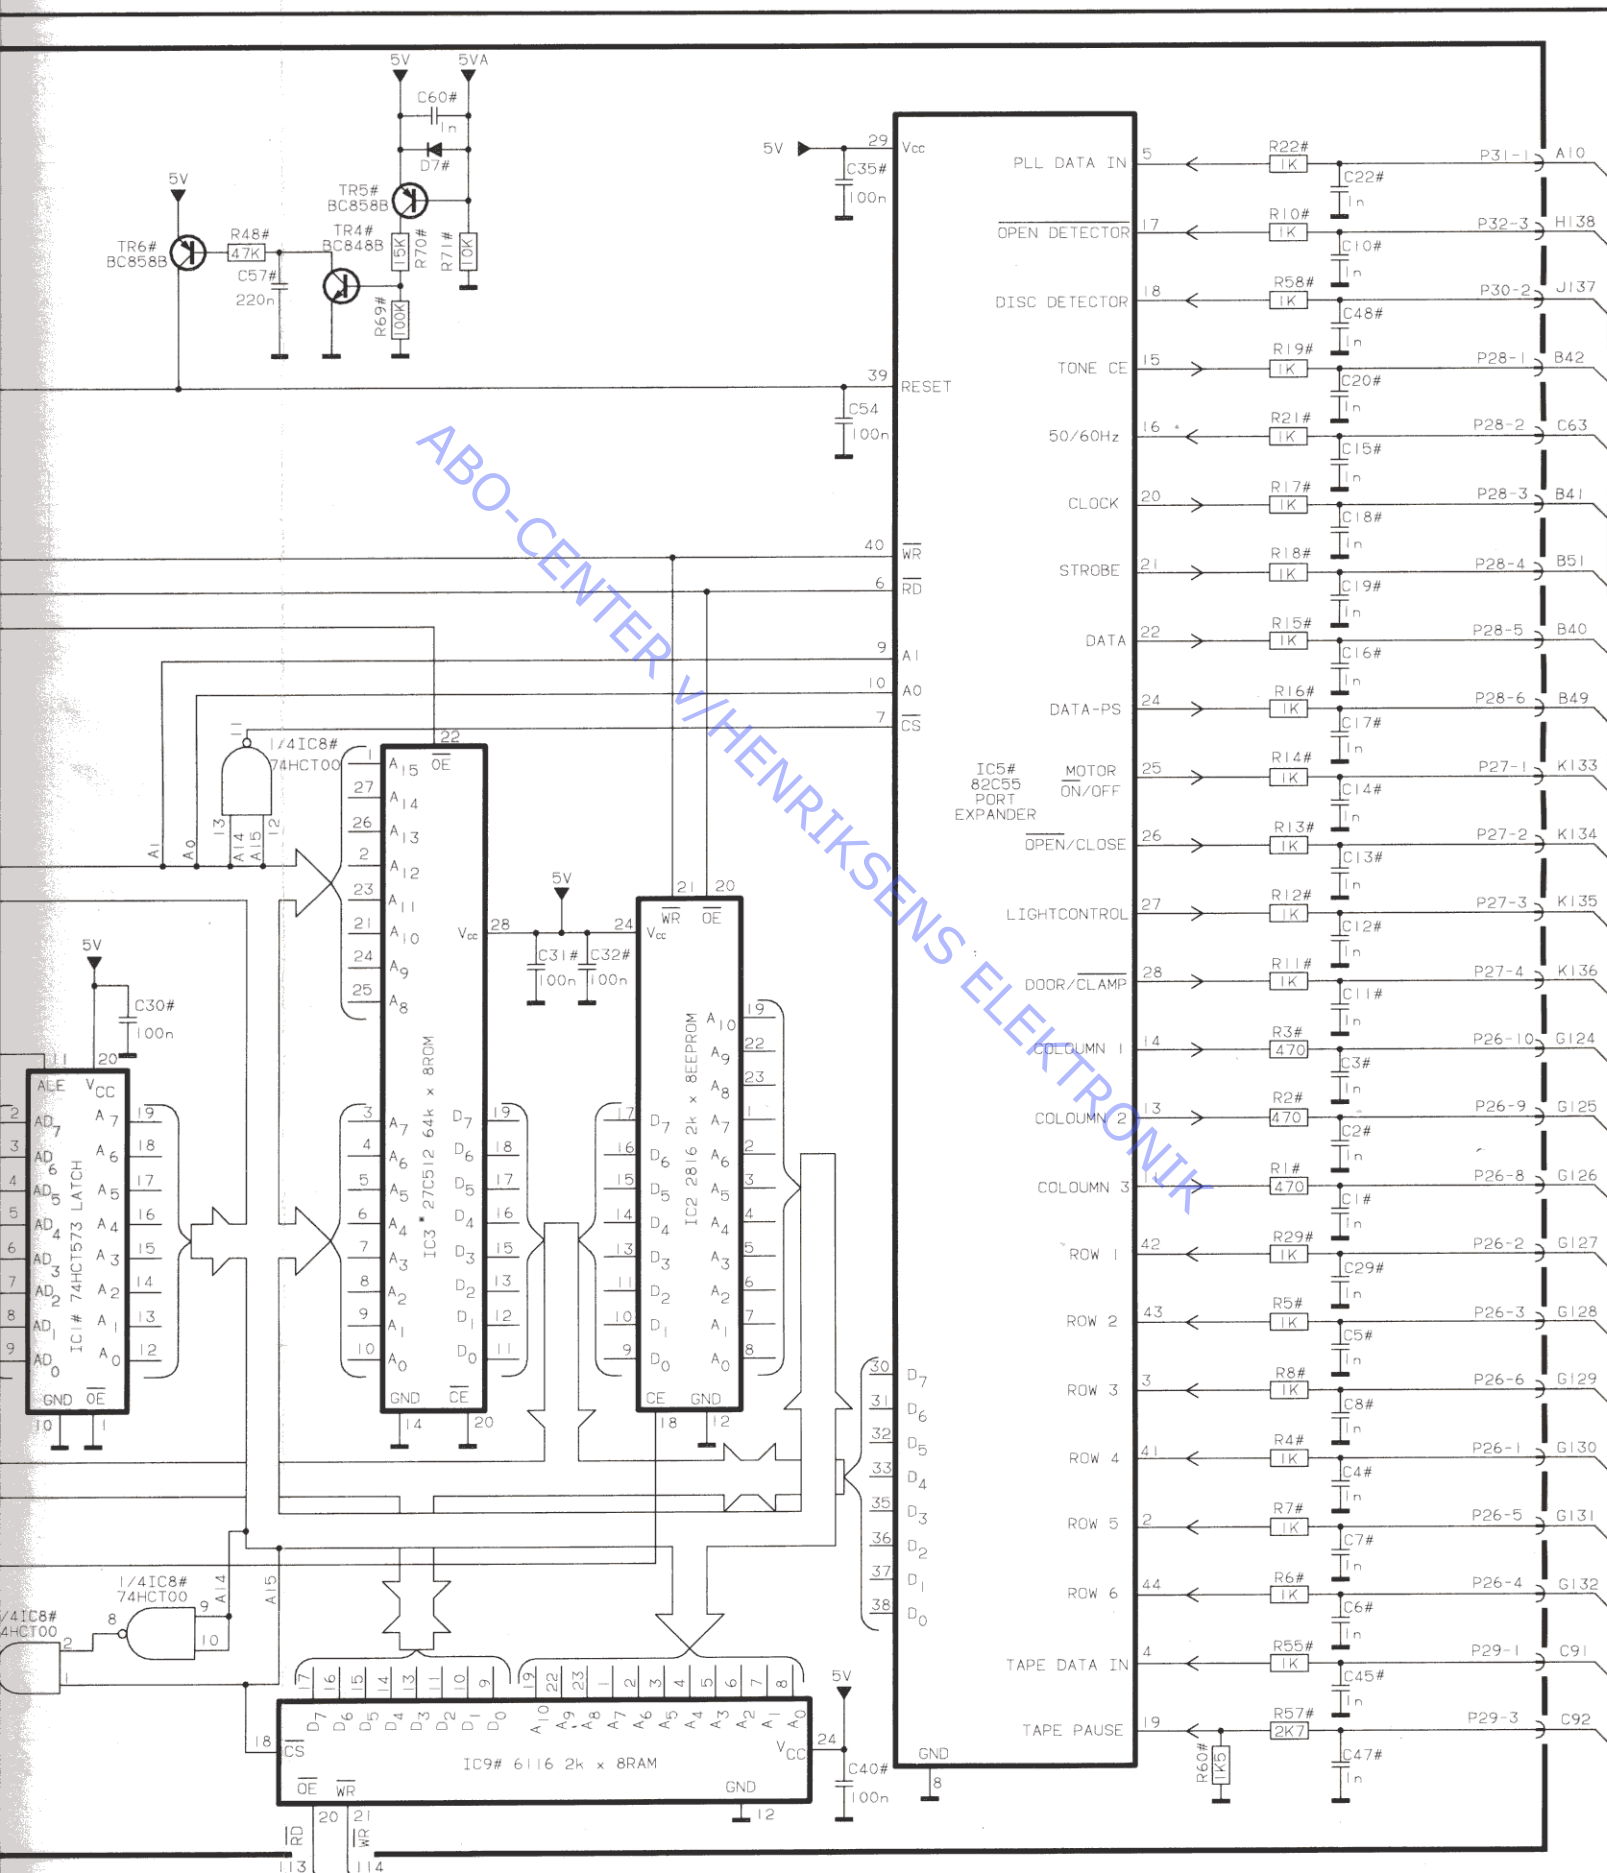

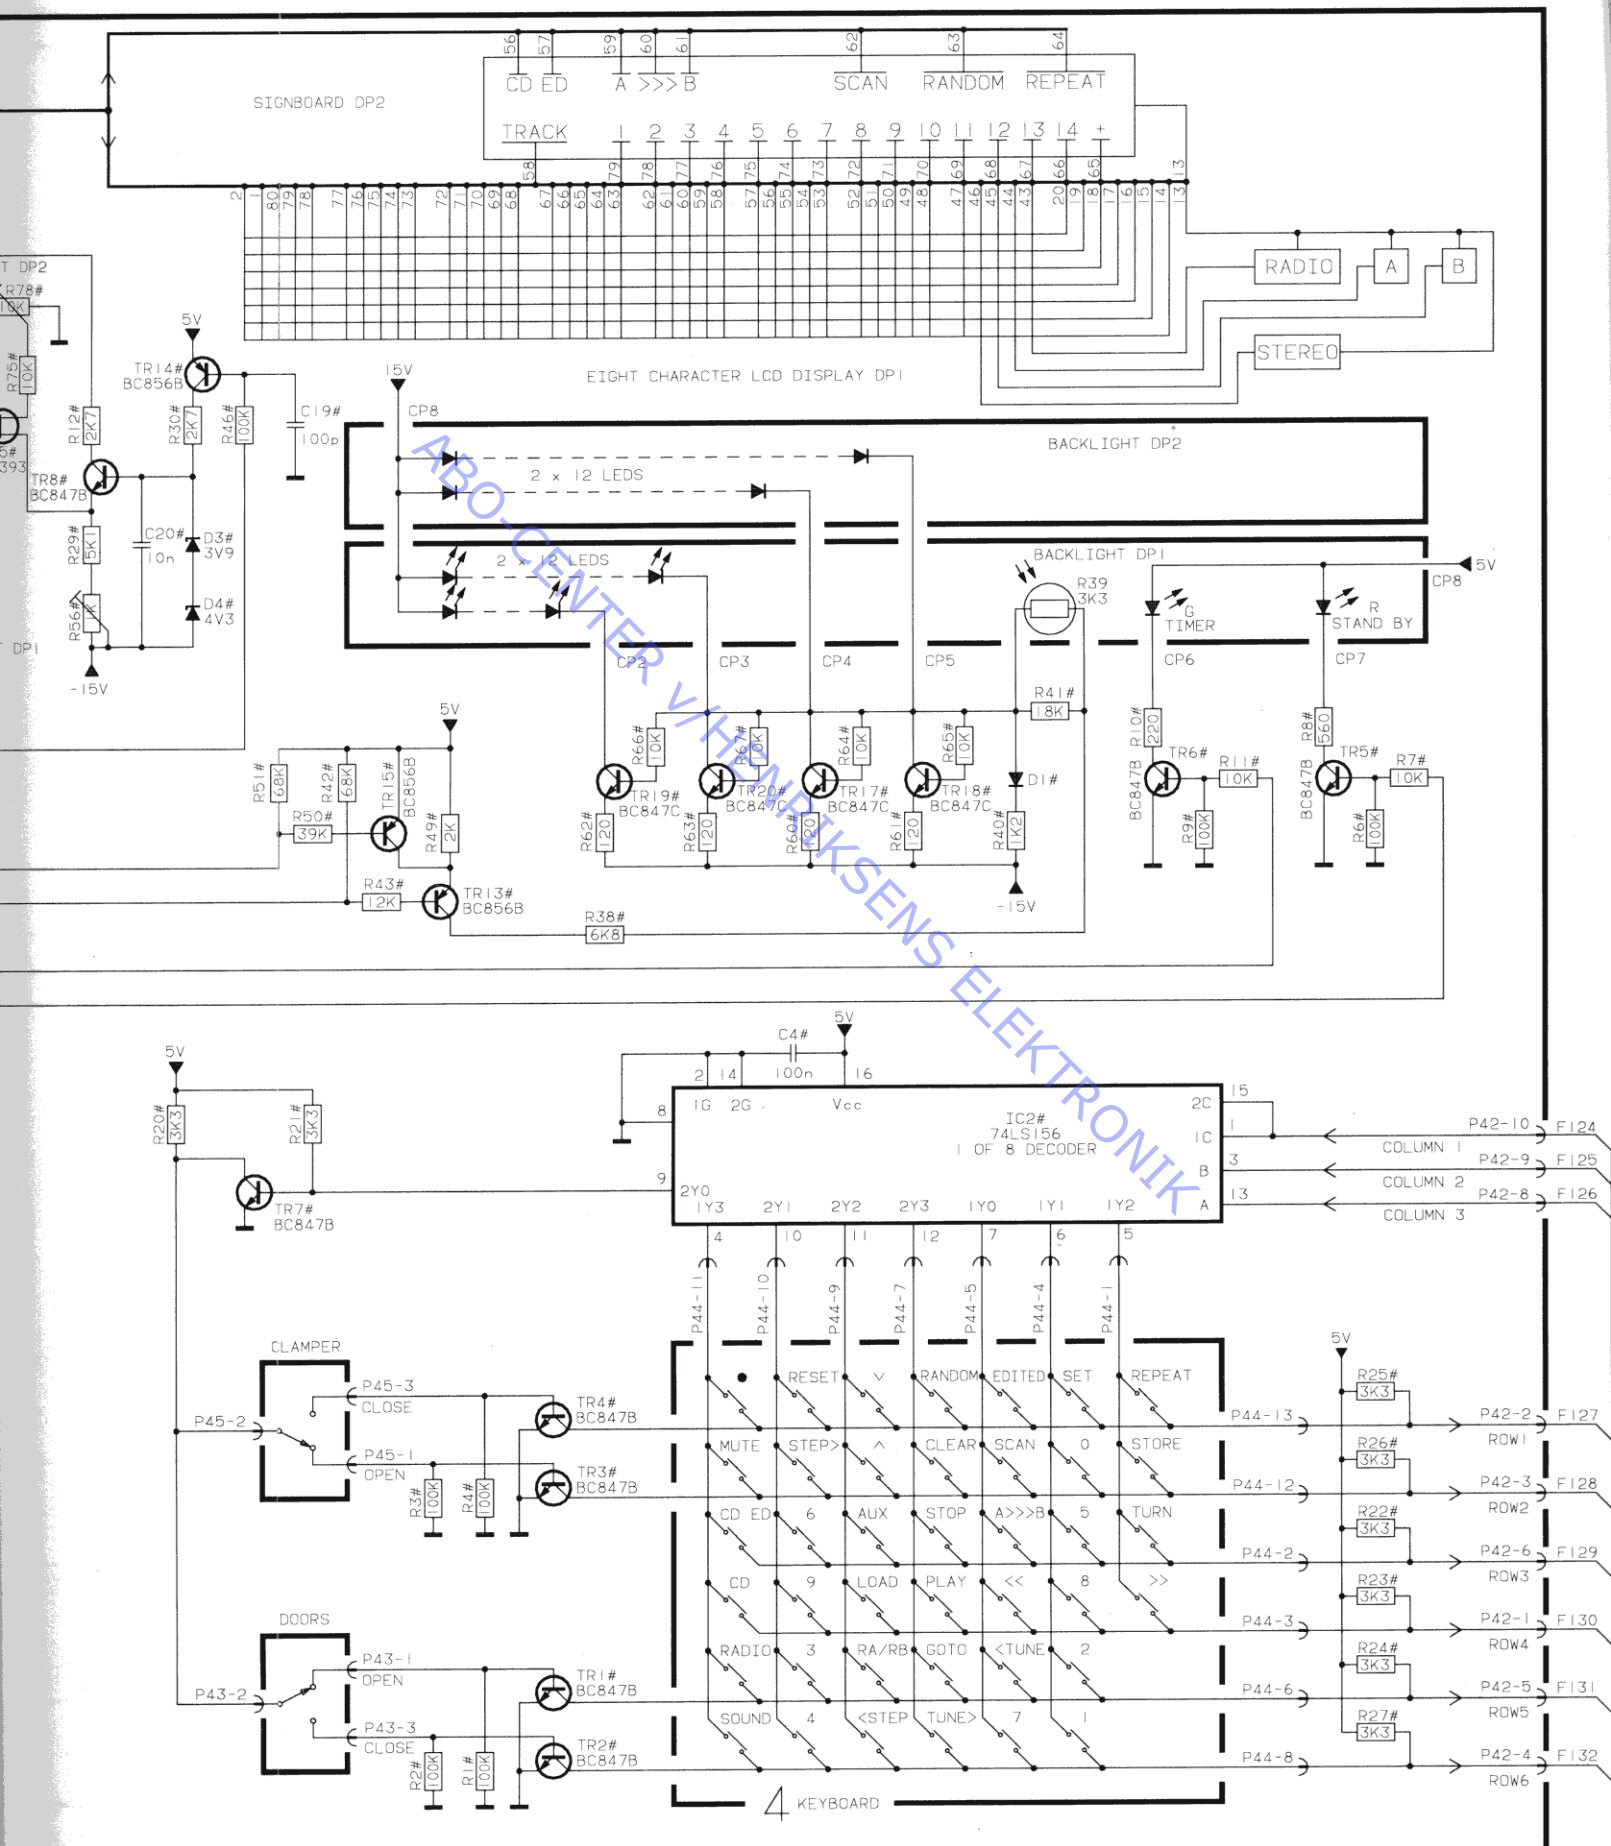


DIAGRAM G DISPLAY AND KEYBOARD

