


Bang & Olufsen

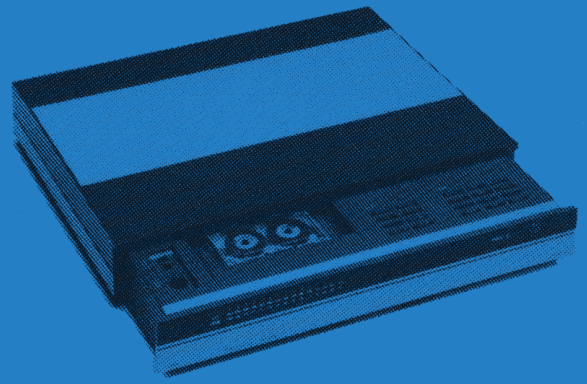


Beocord 5500

Type 4931, 4932, 4933,
4934, 4935

SERVICEANLEITUNG/
MANUEL d'ENTRETIEN



DIAGRAM A (Bias Osc., P.B. Ampl., Rec. Ampl., HX PRO)

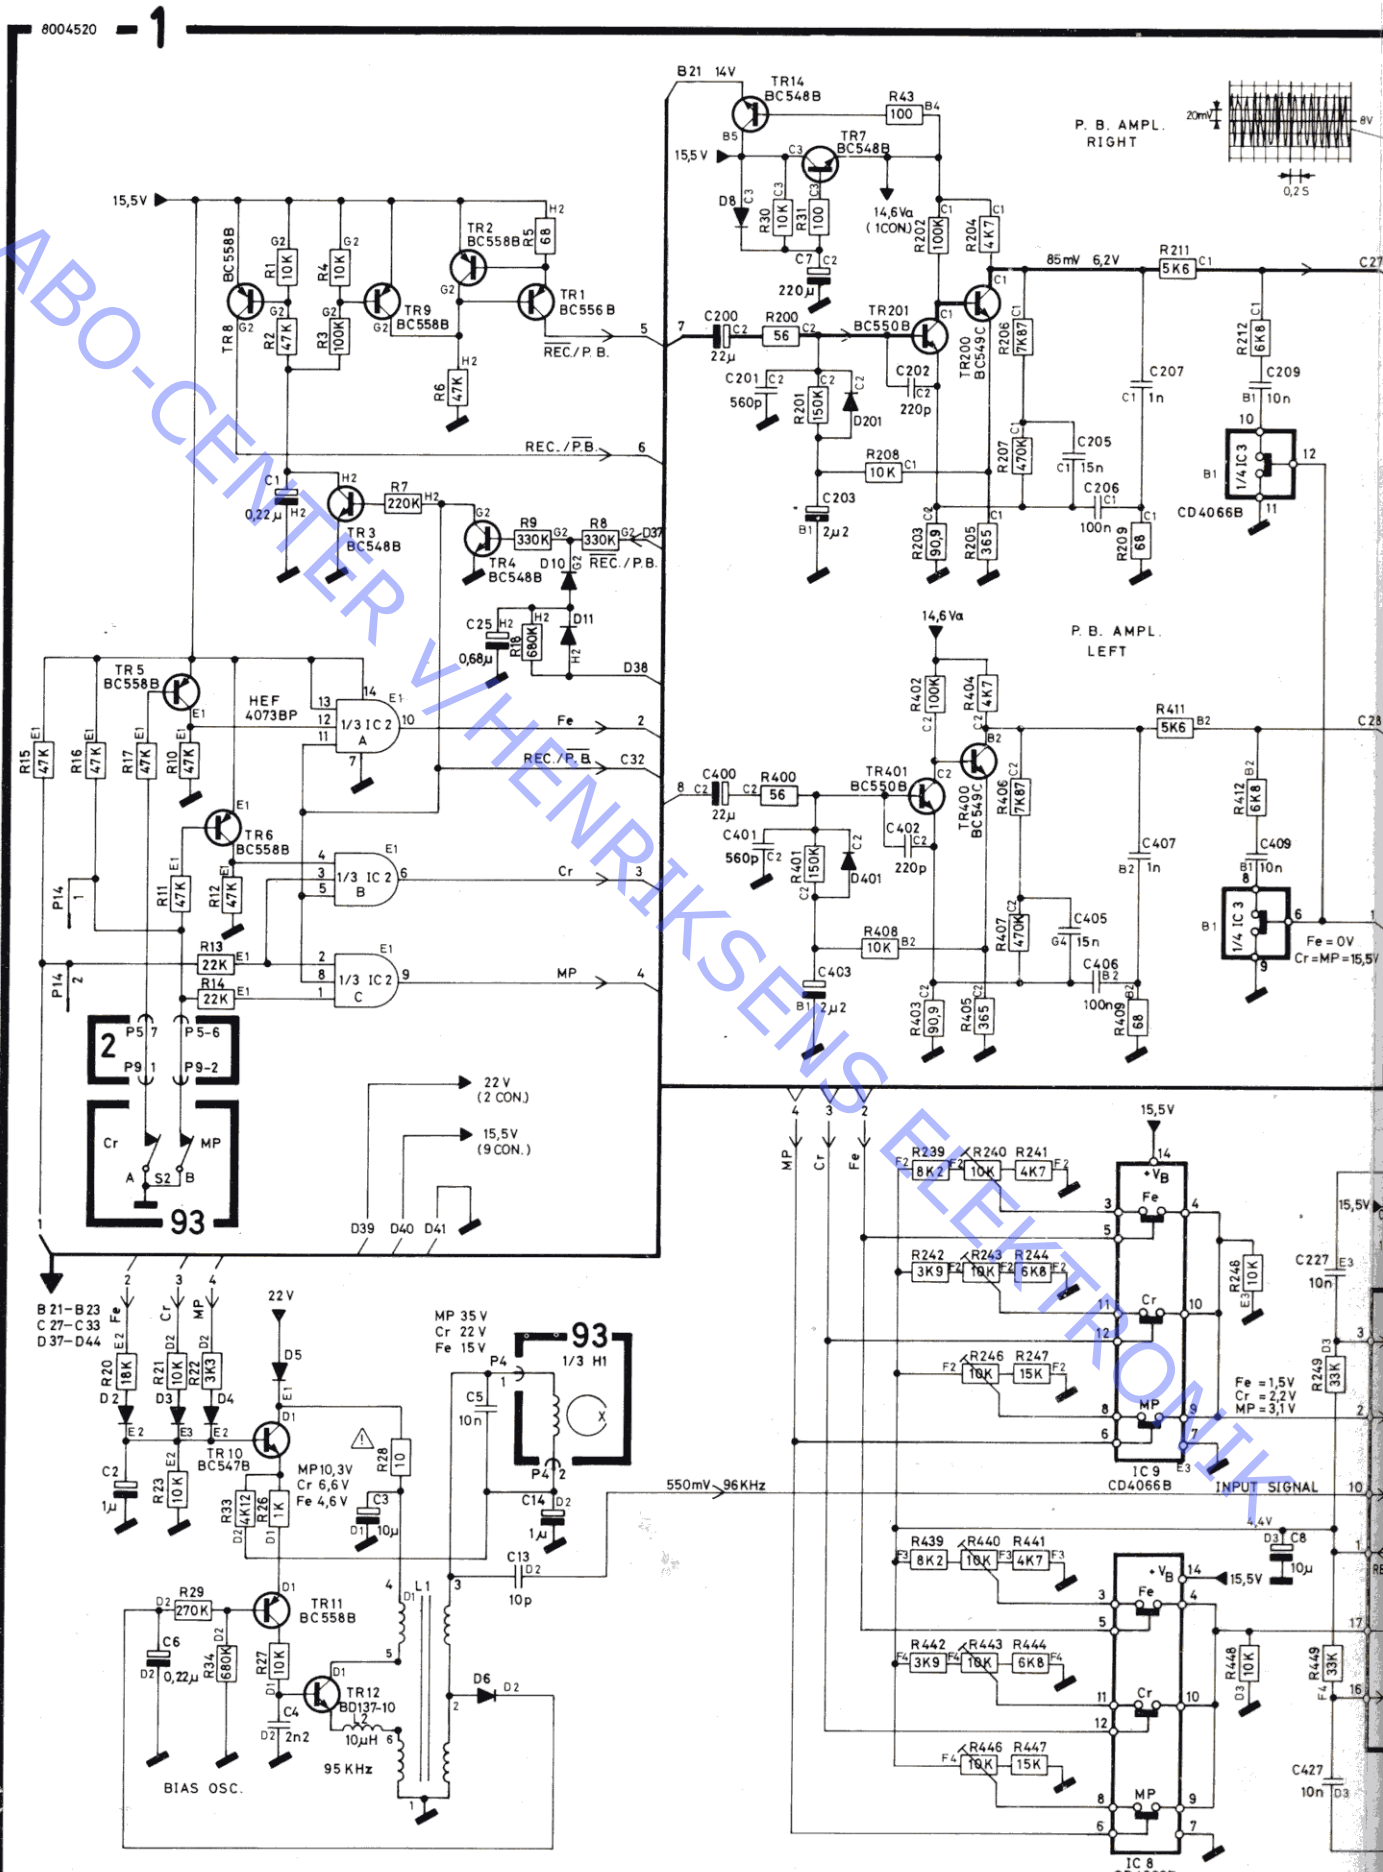



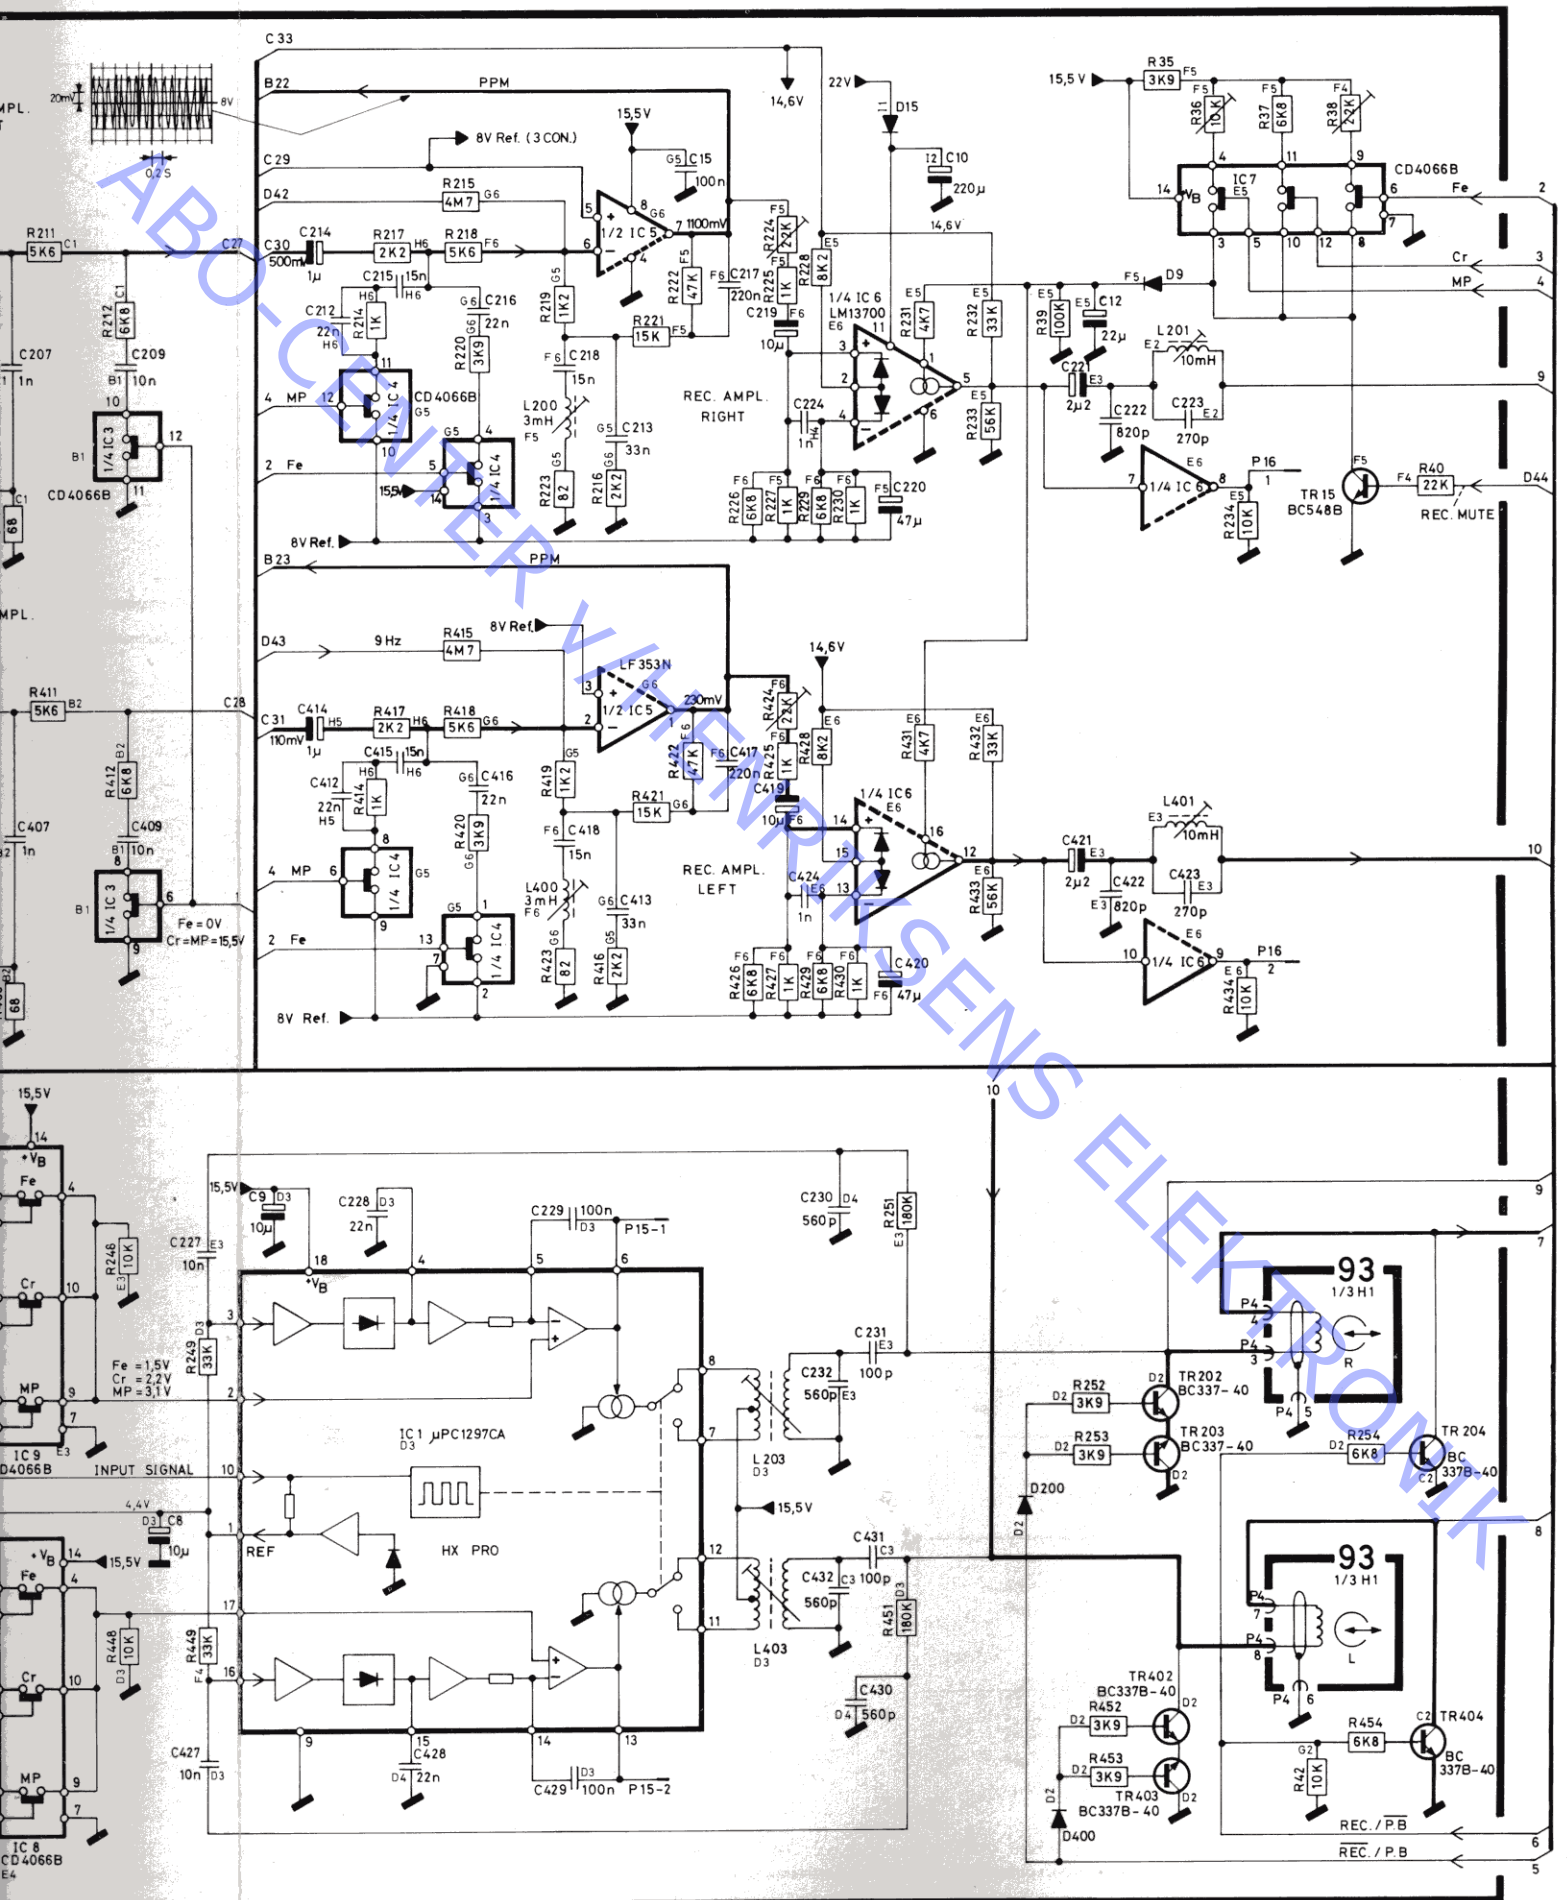


DIAGRAM B (Mic. Ampl., Rec. Level, Signal Strength Sensor)

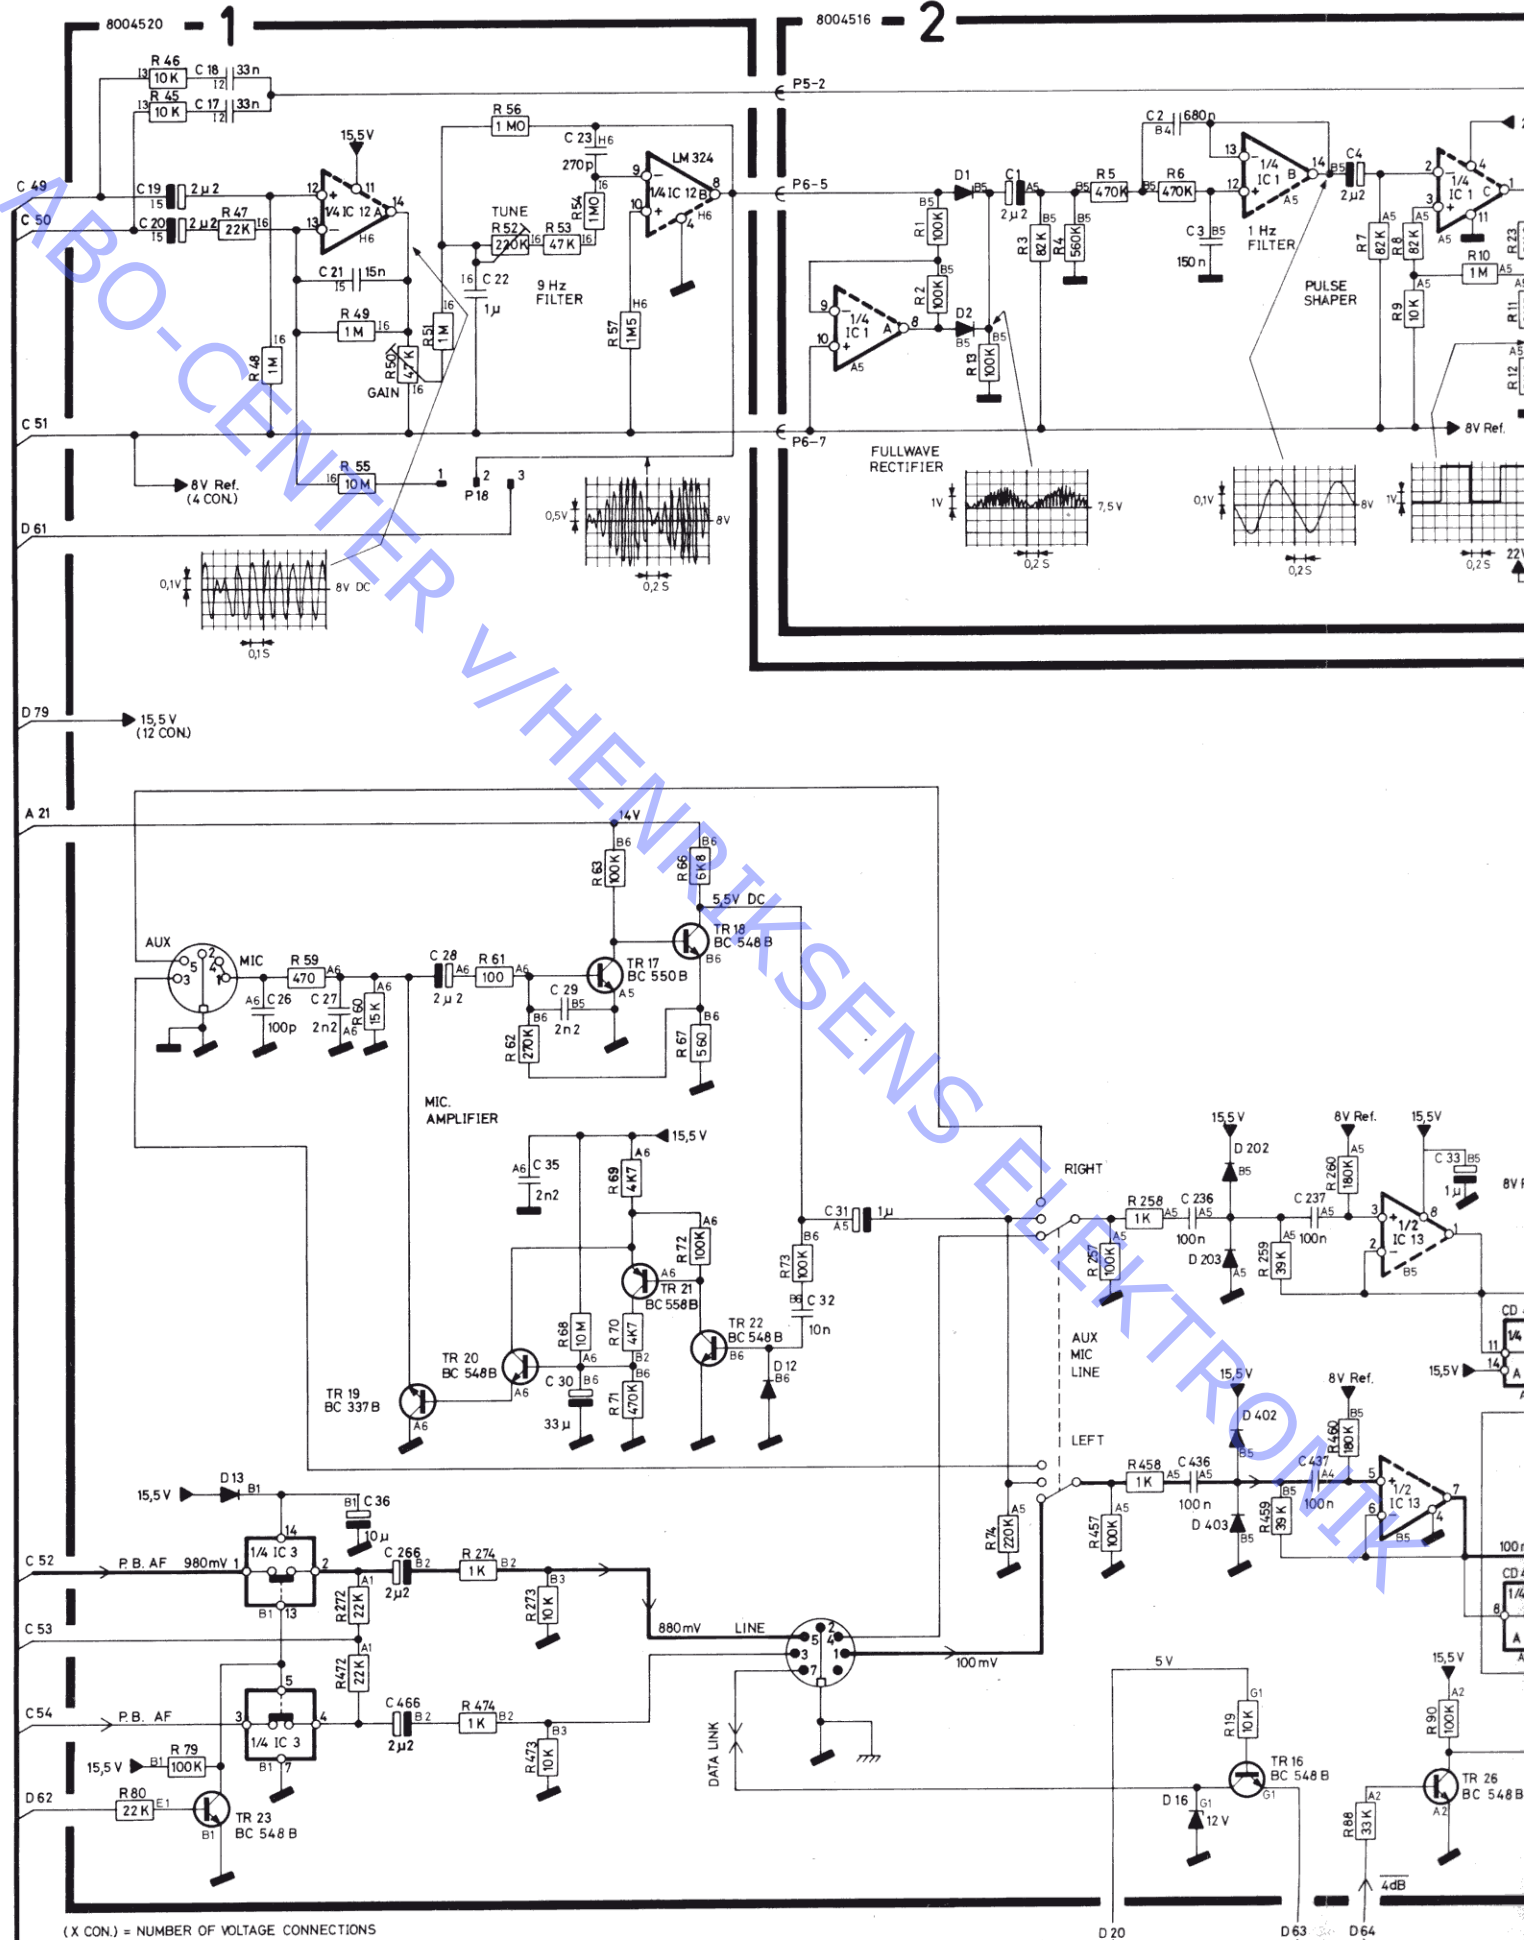


(X CON.) = NUMBER OF VOLTAGE CONNECTIONS

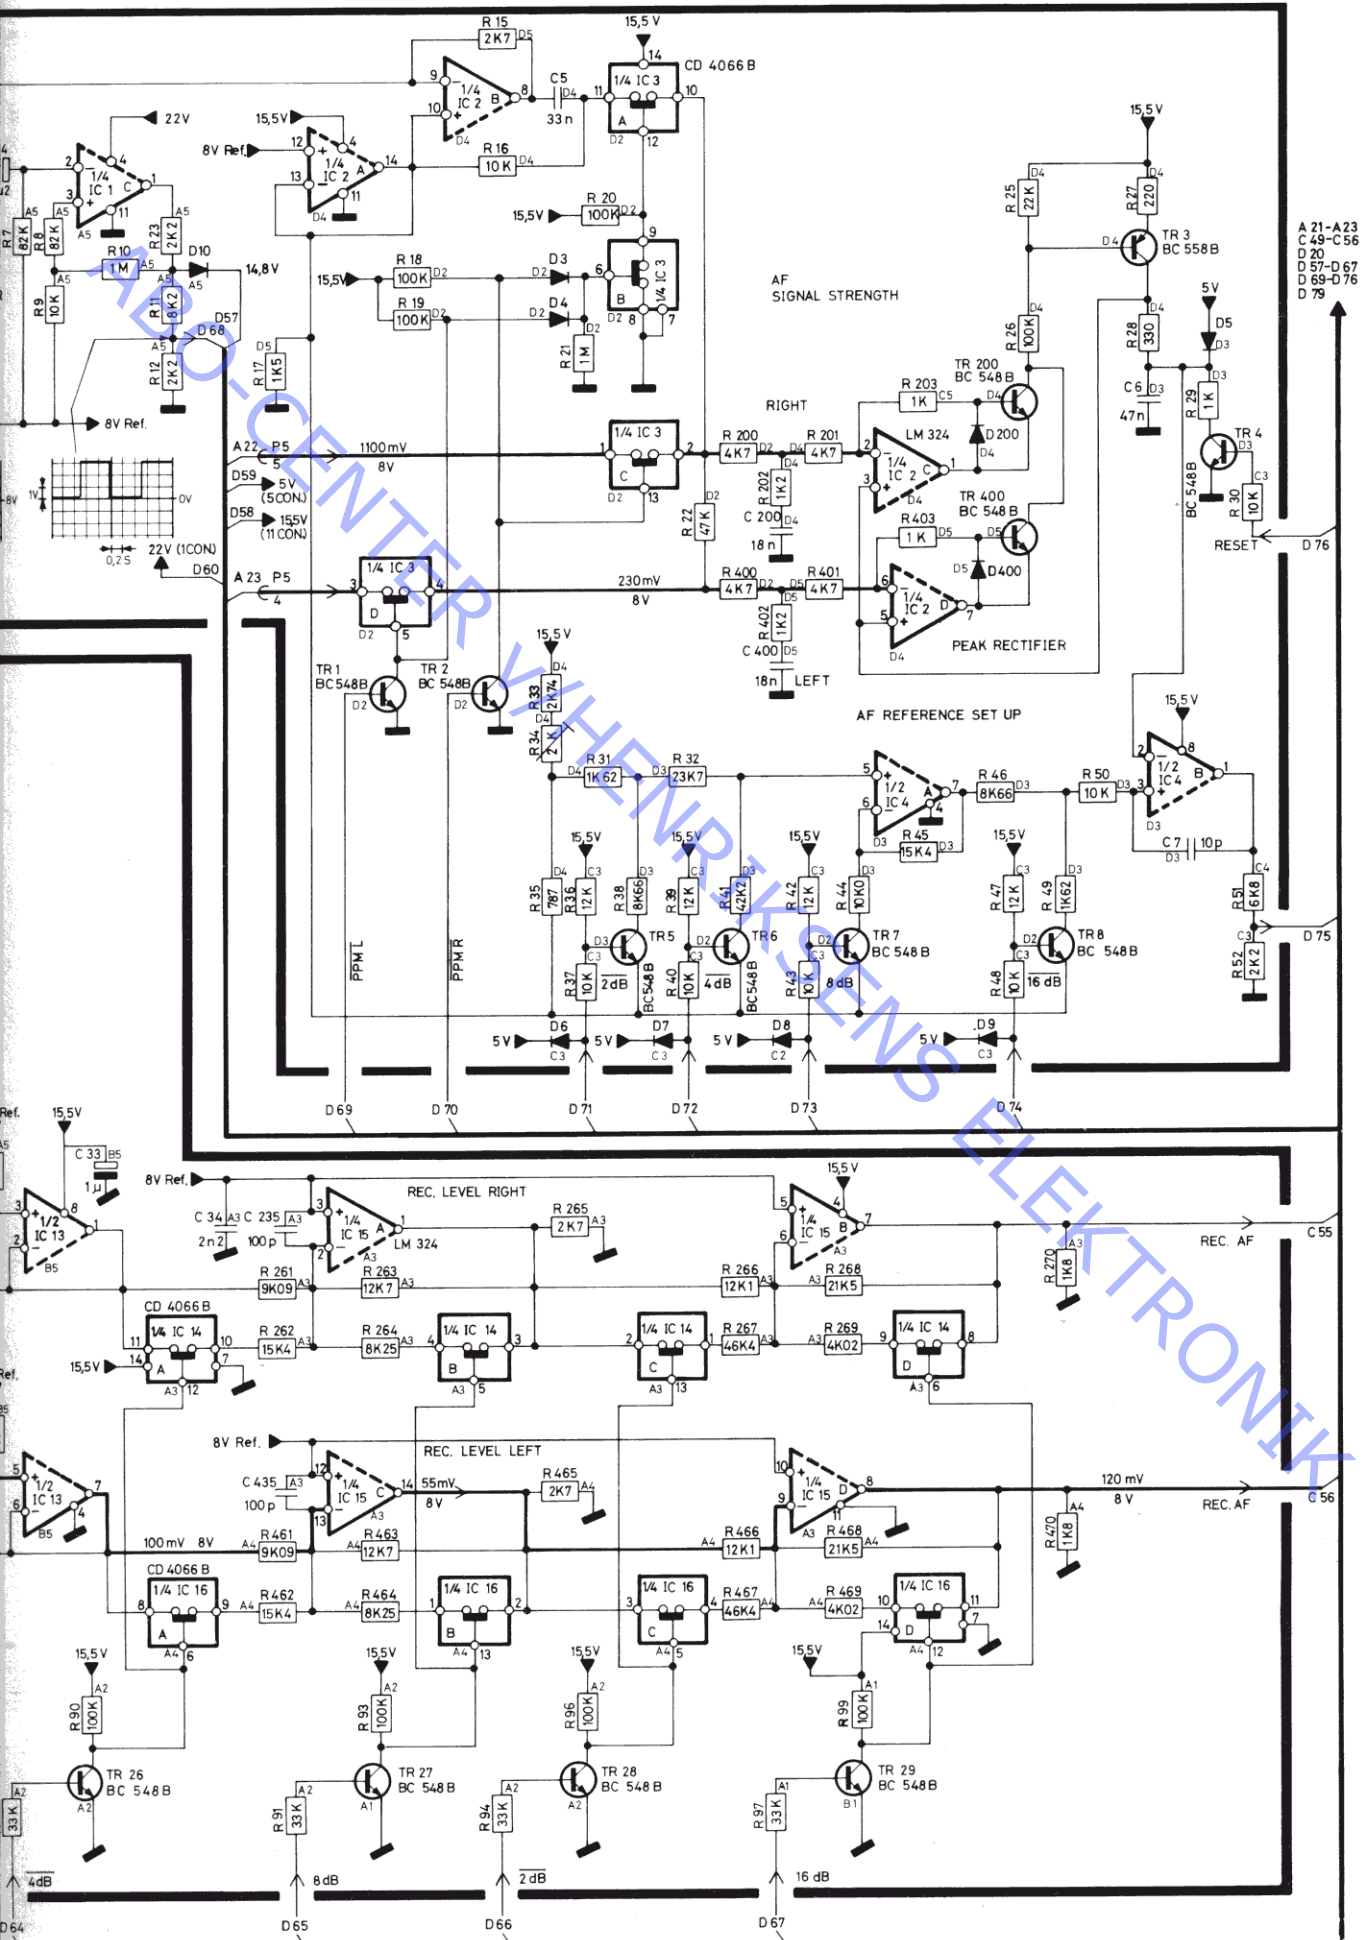


- A 21-A23
- C 49-C 56
- D 20
- D 57-D 67
- D 69-D 76
- D 79


DIAGRAM C (Dolby NR B, C)

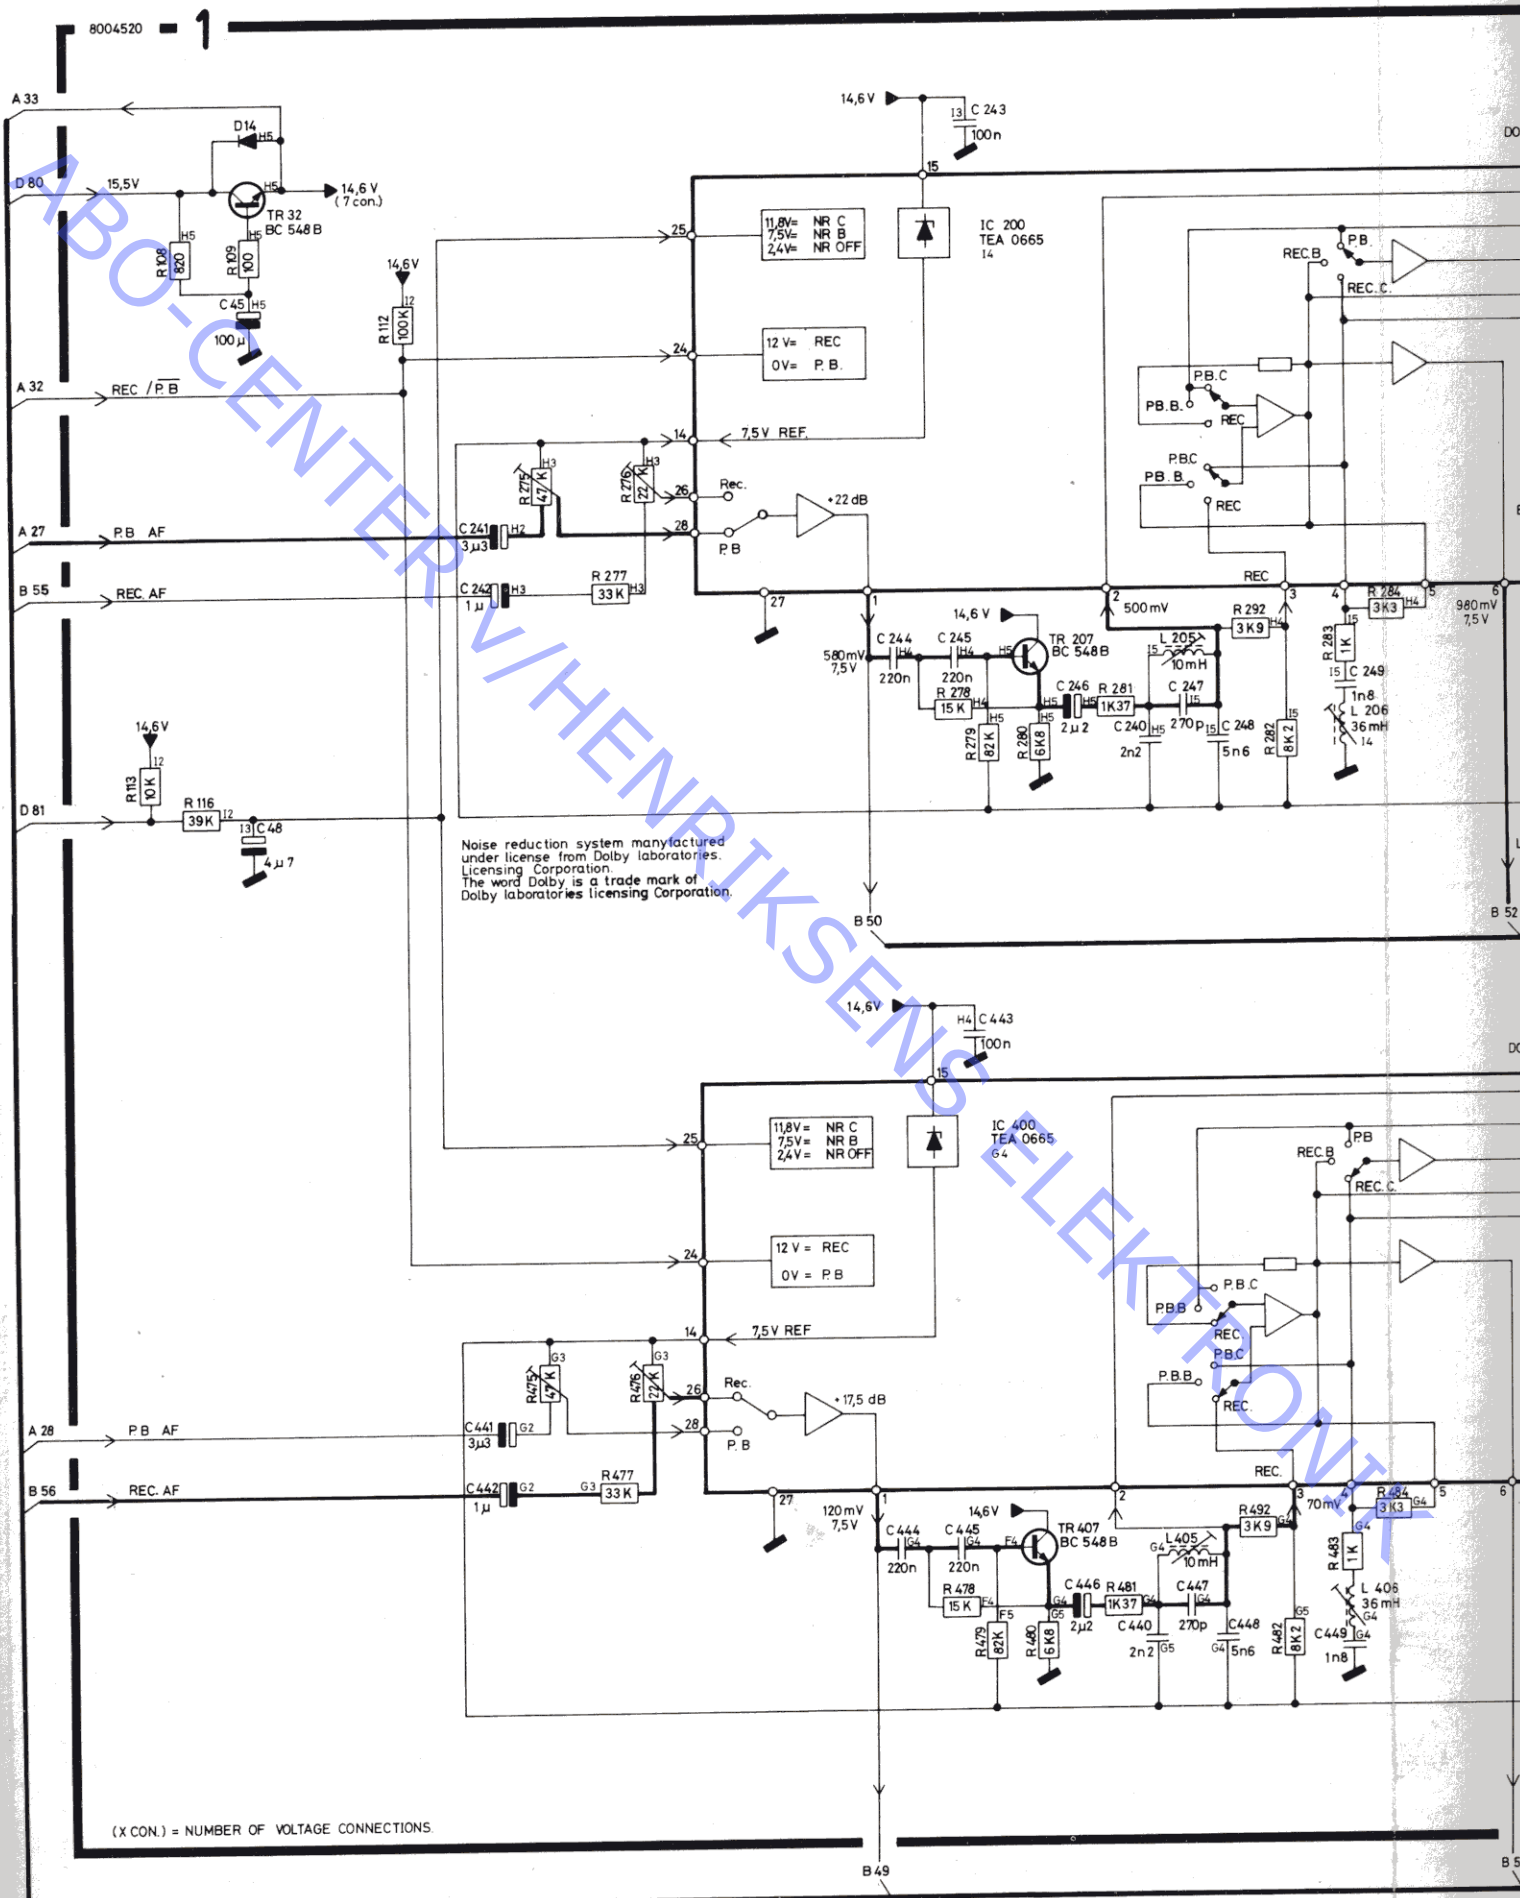

DOLBY NR B/C RIGHT

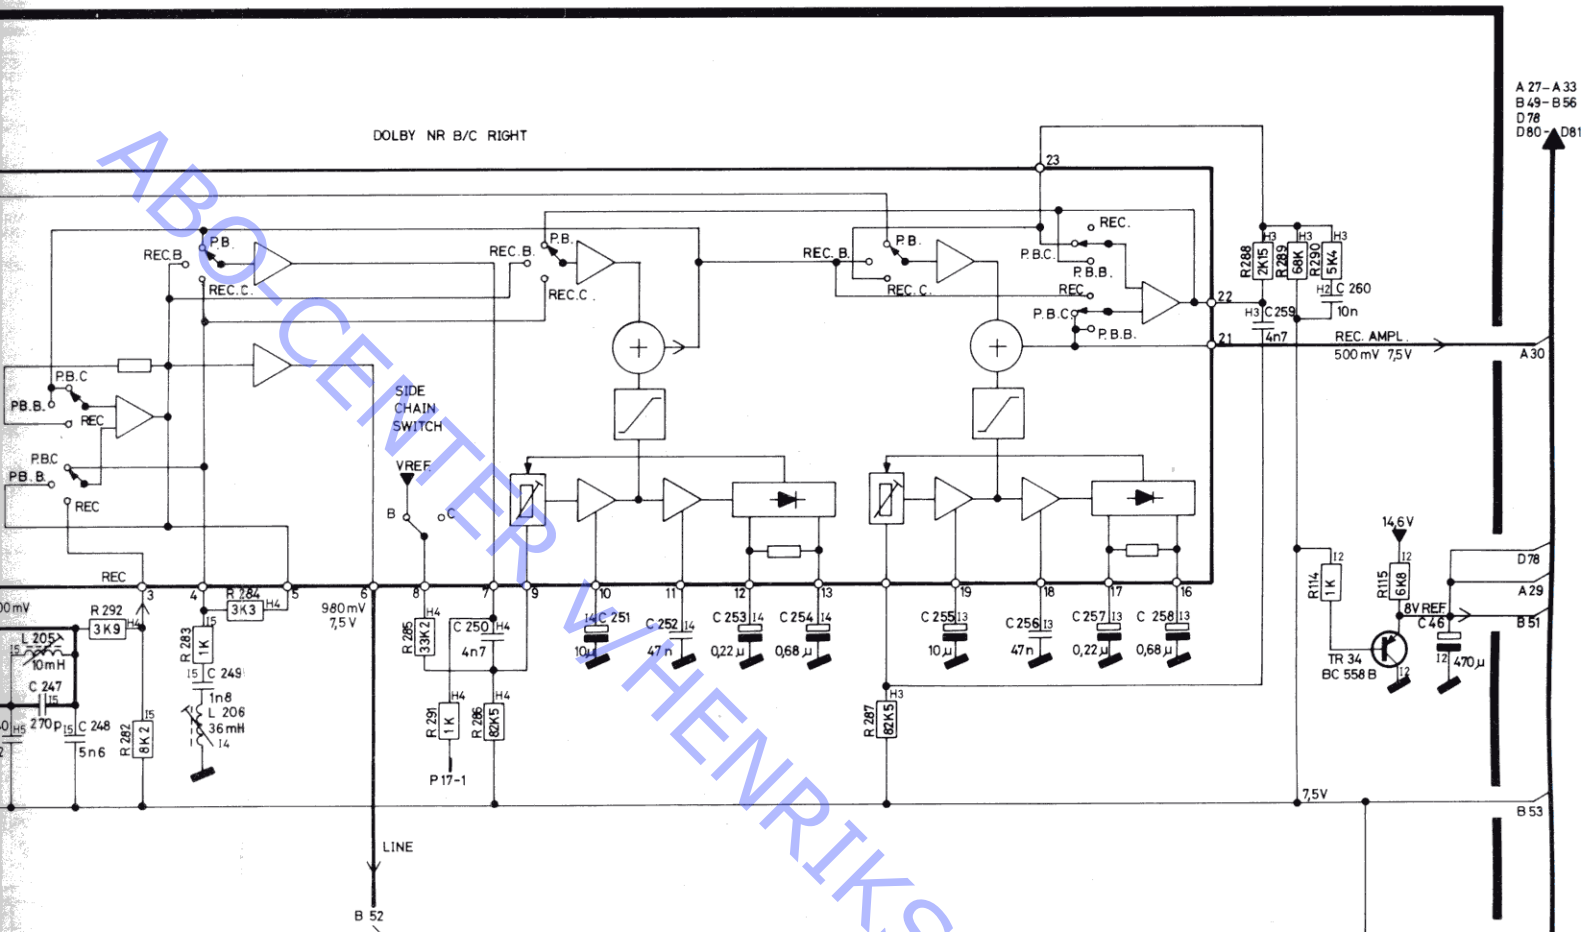

DOLBY NR B/C LEFT

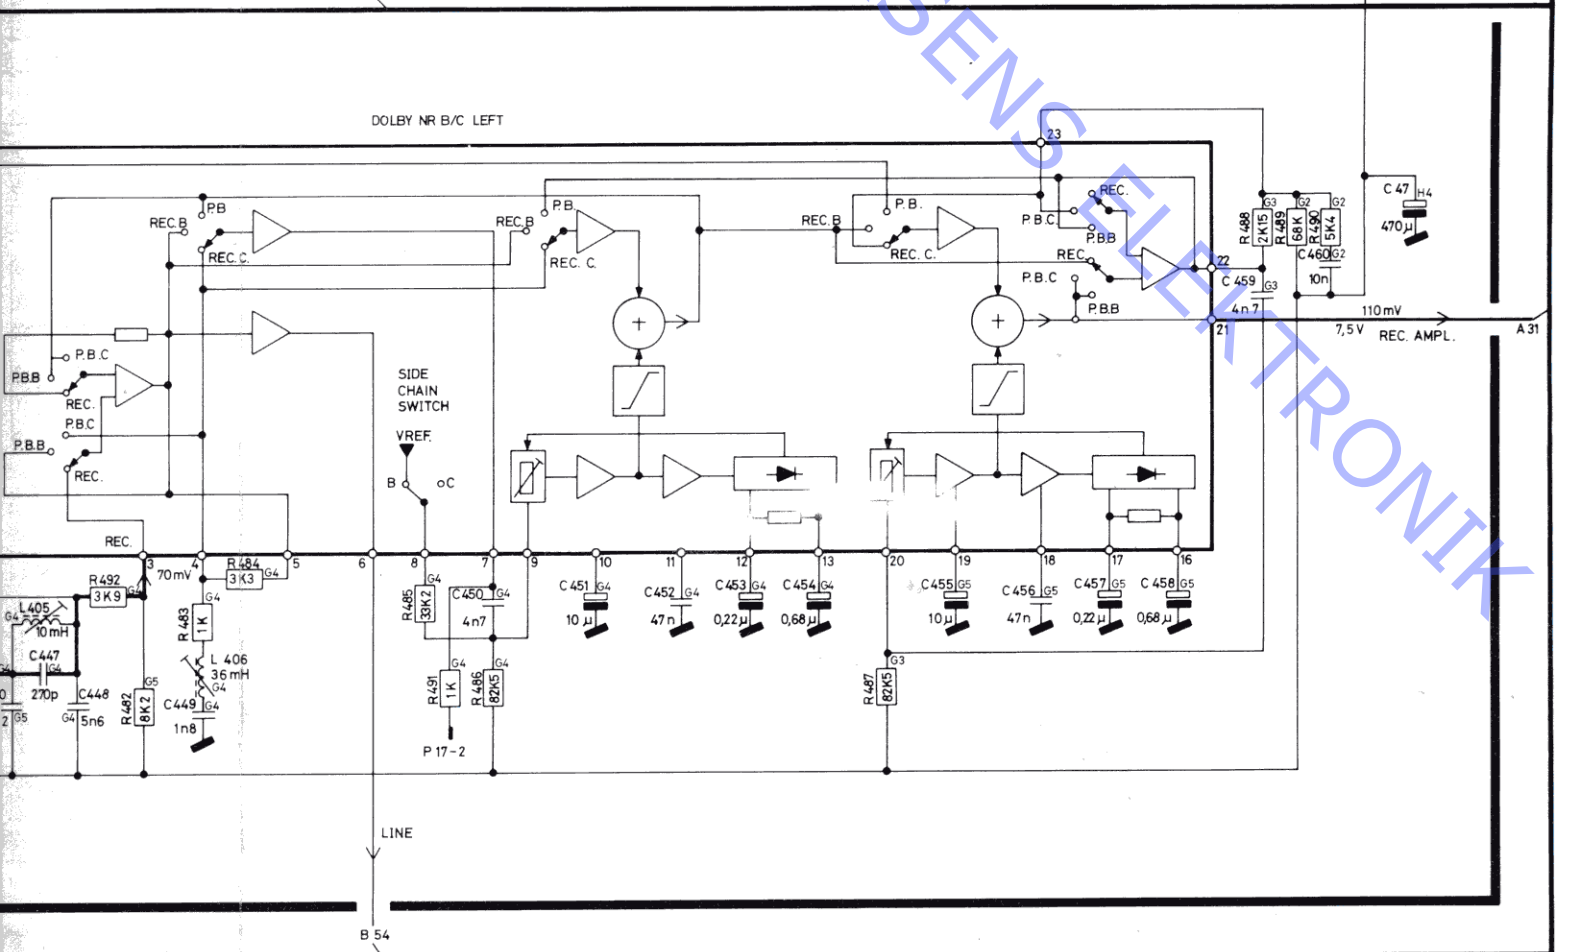

A 27-A 33
B 49-B 56
D 78
D 80-D 81

A 31

B 54

ABO CENTER HENRIKSENS ELETTRONIK

DIAGRAM D (Control Circuits, Power Supply)

