


LinTronic

<http://www.lintronic.dk>

Interfacing to B&O MasterLink

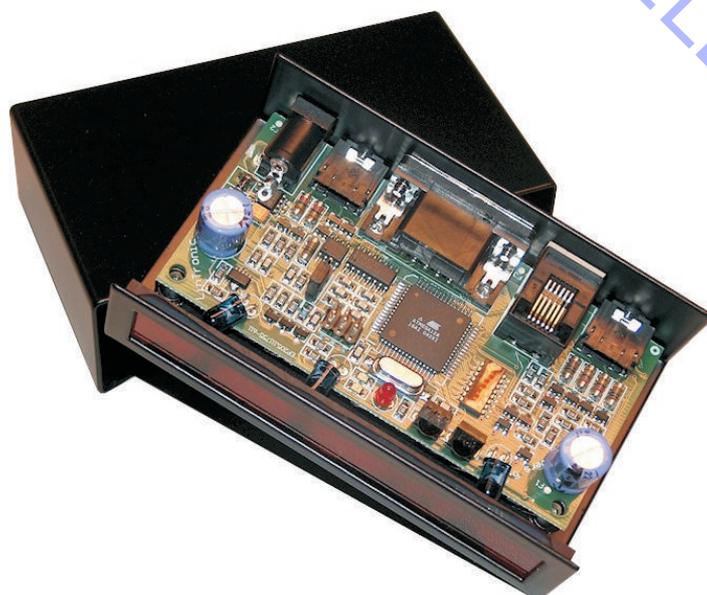


LinkRoom

See next page


Connecting to
the TV's scart connector

See page 7

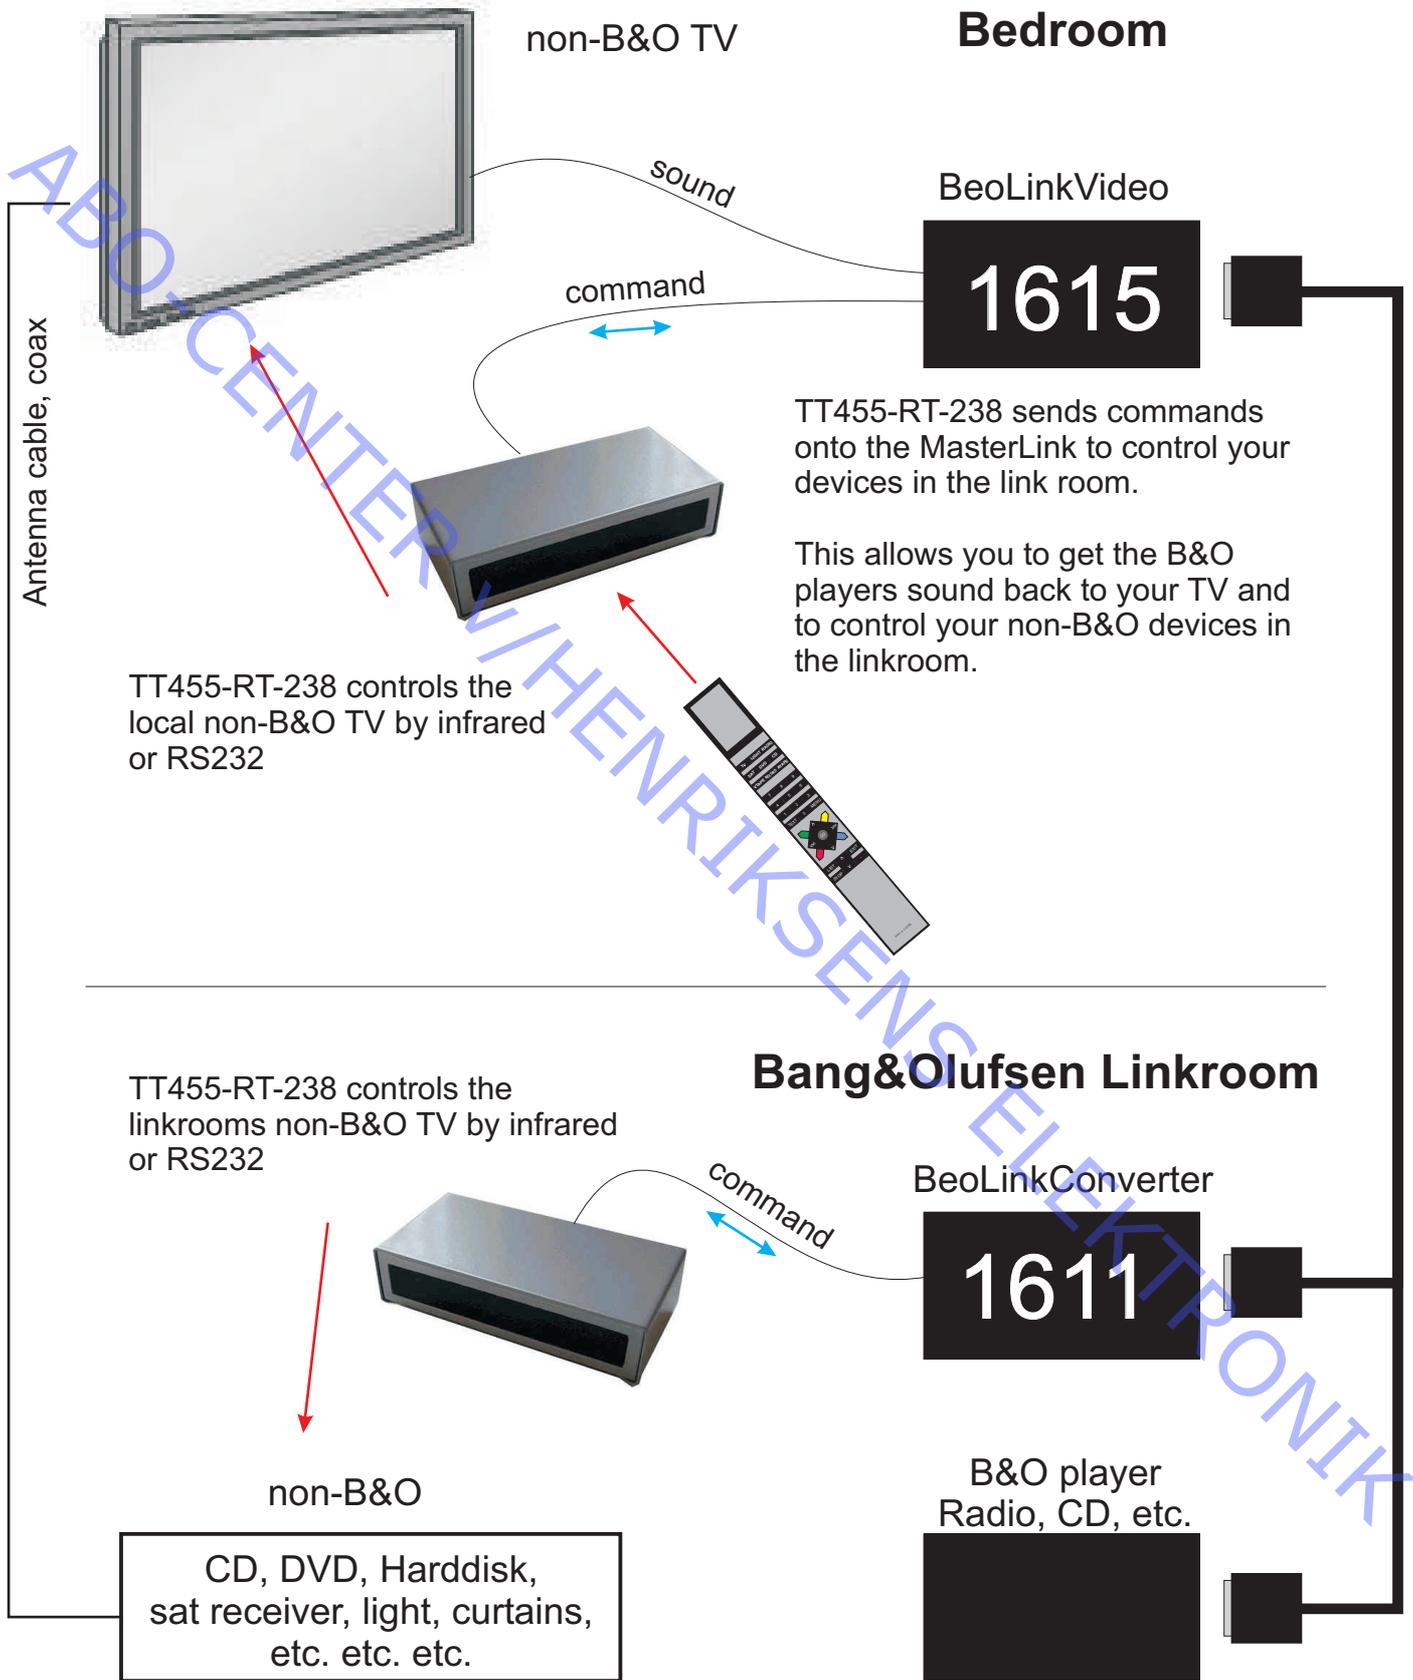

Bedroom

Optional
B&O receiver

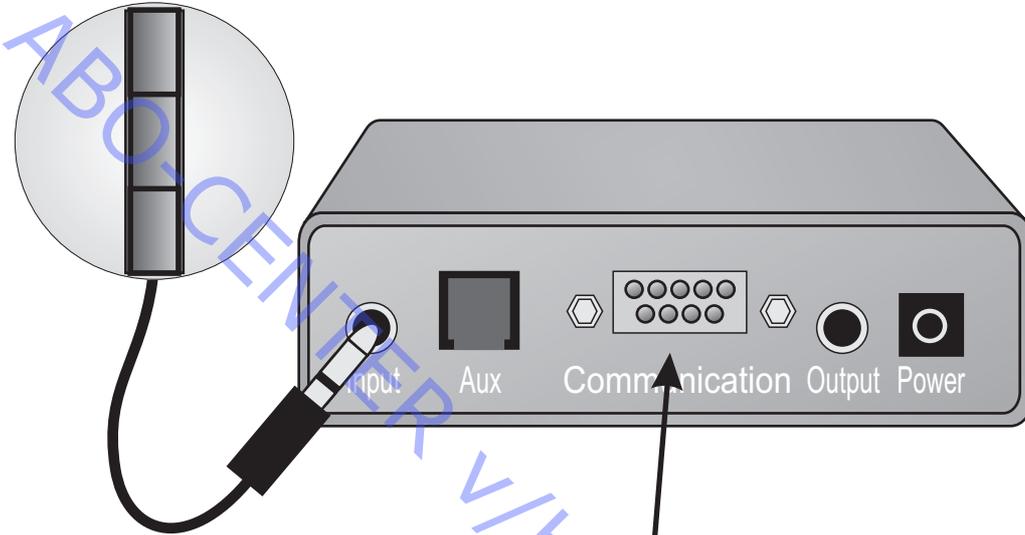


Tx (to device)
Rx (from device)
Gnd (to device)


If you do not control anything by RS232
then simply forget about these 3 wires.



TT455-RT-238 jumpered
for RS232 (default)

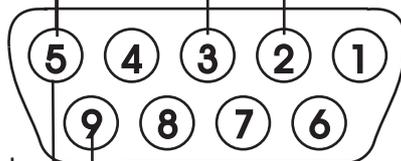

BeoLinkVideo
DIN connector

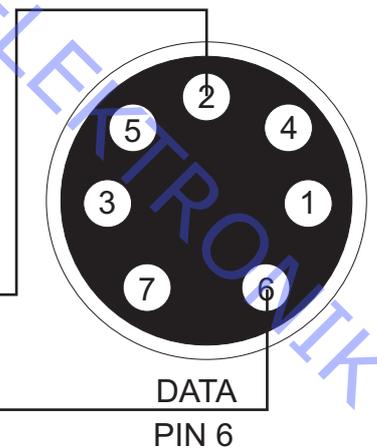

GROUND
PIN 5

DATA GROUND
PIN 2


DIGITAL OUTPUT 2
PIN 9

DATA
PIN 6

See important comments on next page

Bedroom

Important comments to the Digital Output 2

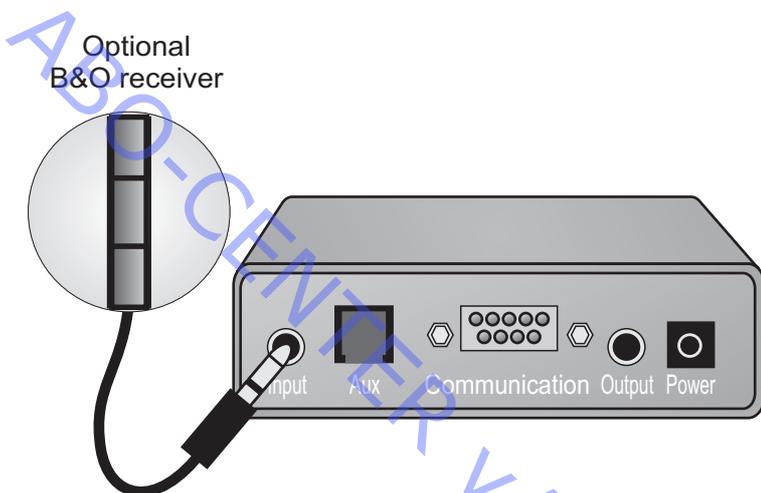


Setting digital Output to: 5 = BEOSYSTEM will copy ALL pulses from the BEO remote to the MasterLink allowing you to send for example LIGHT commands onto the MasterLink.

However, if this is what you want you must use an external B&O IR receiver, as the receiver delivers link-timing signals which the remote control does not.

LinTronic recommend: Setting digital Output to: 1 = STANDARD and let the configuration in the TT455-RT-238's Memory Map specify which commands you send onto the link.

This will reduce the data-traffic on the link.


Please observe: The MasterLink is not our system, so LinTronic cannot ensure against unwanted results if commands from different places in the house collide on the link.

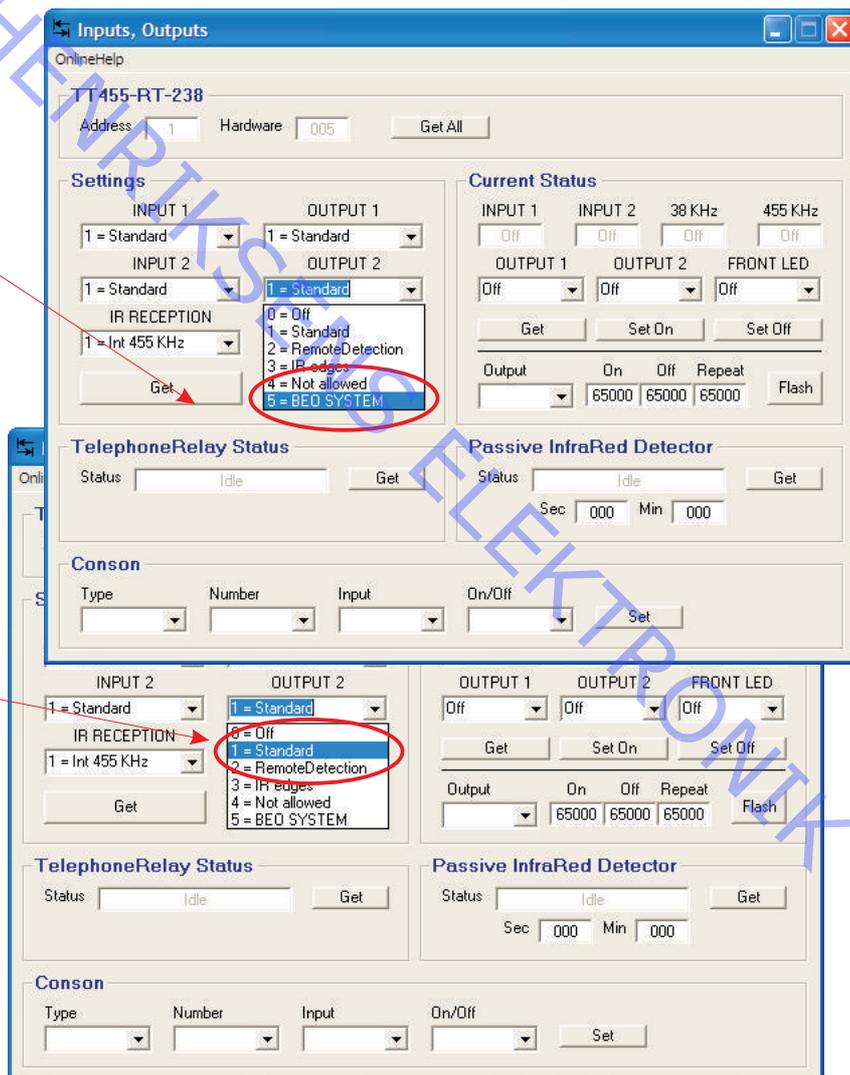



B&O linkroom

BeoLinkConverter AUDIO AUX LINK

Jack connector seen from solderside


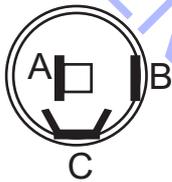


A = 5 volt coming out of TT455-RT-238
DO NOT USE PIN A, 5 VOLT
B = Data input
C = Ground

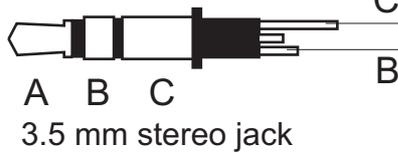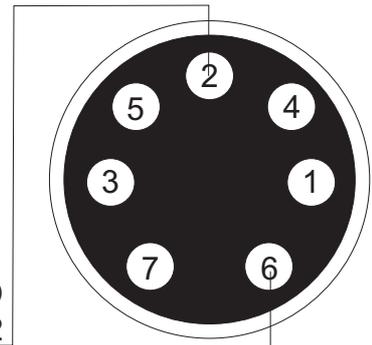

3.5 mm stereo jack

When the jack connector is inserted, the internal IR receiver is disconnected. To make the internal receiver "work" again, remove external receiver, remove power and reapply power.

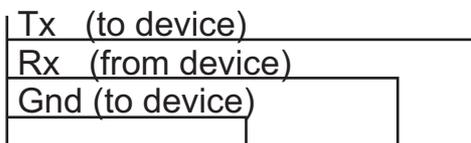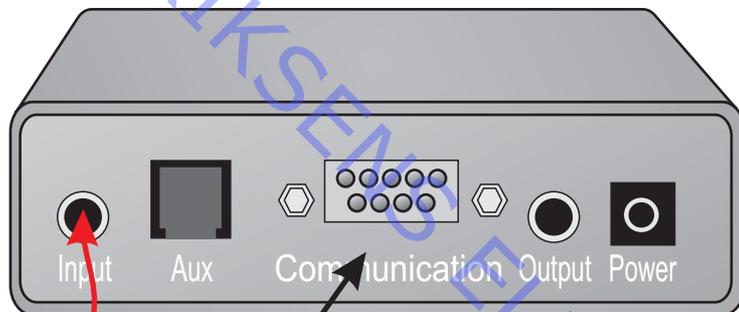

If you do not control anything by RS232 then simply forget about these 3 wires.

TT455-RT-238 jumpered for RS232 (default)

On the following pages

Connecting to
the scart connector


B&O MasterLink

Hej Michael,

the -238 box can be controled from all linkrooms via masterlink. IR command is sent by BEO4 to masterlink to BV7-40 in the livingroom. The non B&O device is connected to AV1-socket (SCART) of BV7-40 assigned as V.MEM. All commands in V.MEM-mode will reach your -238 box and control the non B&O device from all linkrooms. Hope this helps. If any further questions fell free to ask. I will do another drawing concerning Master control link and Link-Light commands.

Regards
Stefan

We are currently making better documentation.
Contact LinTronic if you are interested.

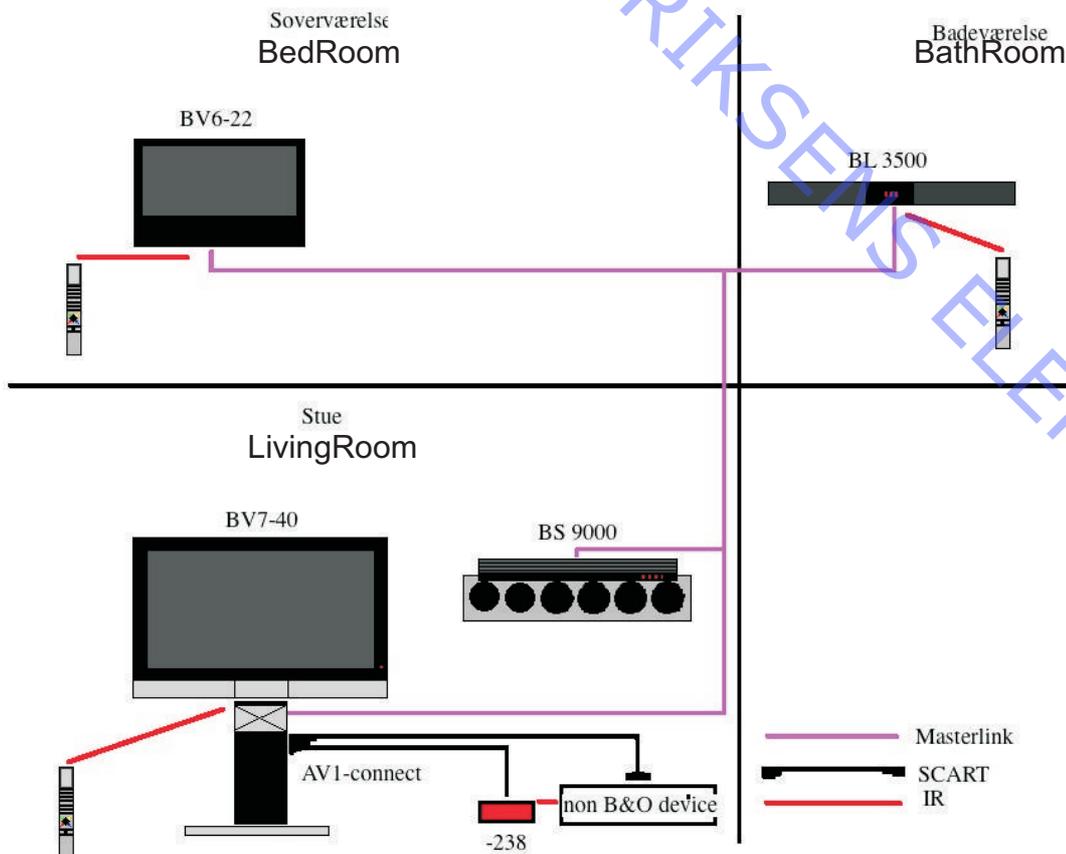

B&O MasterLink

Hej Michael,

in this Configuration the Relay 108 is controled by LINK-LIGHT commands sent onto the master-control-link. We can control the LC2s directly by BEO4 with LIGHT commands in every room. Whole house lighting is done by LINK-LIGHT 1 (2 -3 -4.....GO - STOP), this can also be timer-controlled by the BS 7000. The whole stuff has 2 way communication, so it can receive AND send commands. Curtains (Relay 108) will be controlled by LINK LIGHT Green (long). Red(long)..... from every (MCL) room.

mvh
Stefan

We are currently making better documentation. Contact LinTronic if you are interested.

