




1. Replace tuner

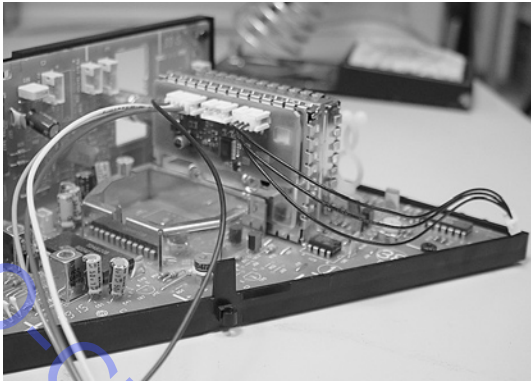


5. Solder Green wire to hole for R2

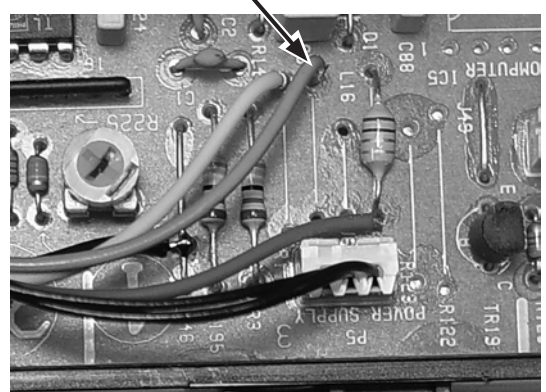


2. Solder plug

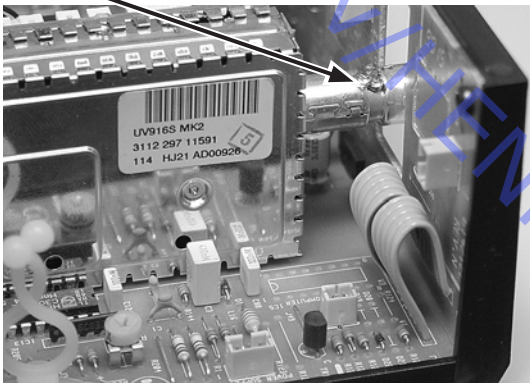


6. Solder Yellow wire to hole for R1

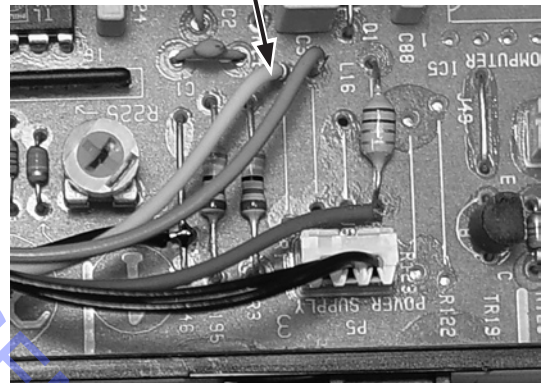

3. Remove R1, R2 and J6

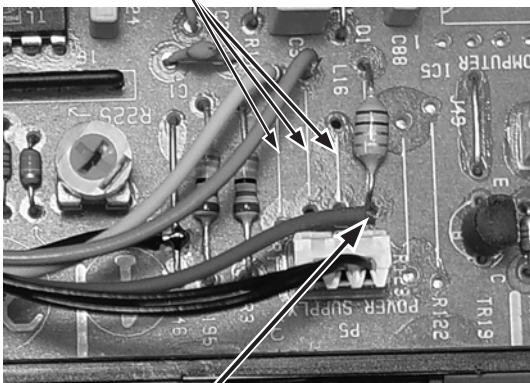

7. Solder Black wire to J46

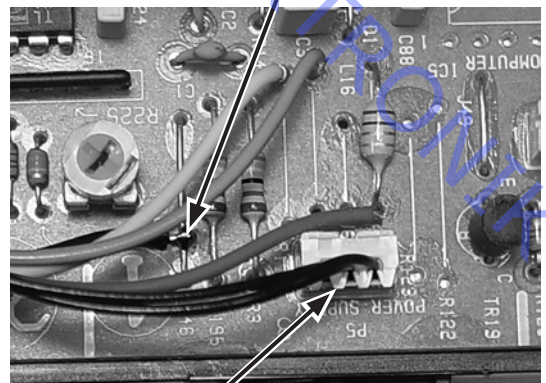

4. Solder red wire to L16

8. Mount plug in P5

